 
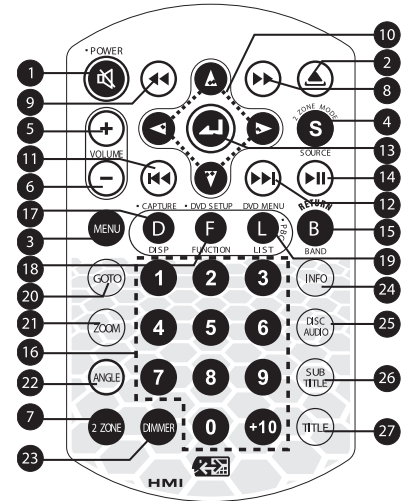 


MCD786 QUICKSTART GUIDE

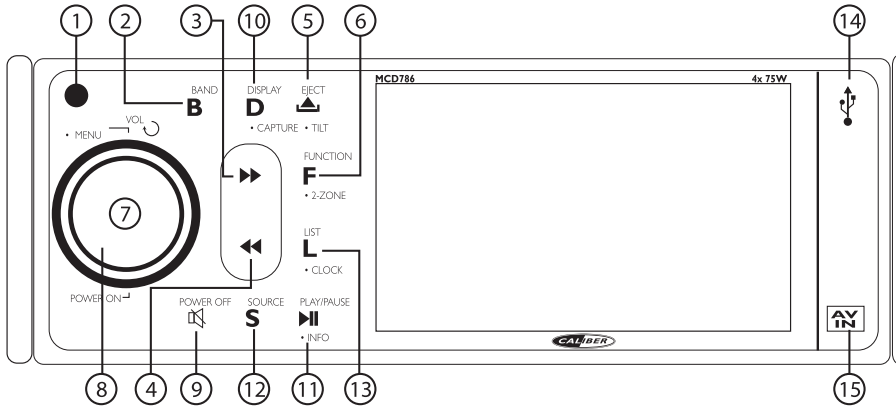


- | | |
|--|---|
| <ol style="list-style-type: none"> 1. Panel release button 2. - Escape button, return to previous mode 3. - Tune up, auto seek. Hold for manual seek (tuner) 4. - Tune down auto seek, hold for manual seek (tuner) 5. Eject disc, hold to set tilt level frontpanel 6. Enter function mode, hold to set Dual Zone | <ol style="list-style-type: none"> 7. Rotary volume knob 8. - Power on / confirm button 9. - Mute, long press for power off 10. - Short press; change display 11. Play/pause, long press to view information (media play) 12. - Source select, press "8" to confirm 13. - View stored station list (tuner) 14. USB port 15. AV input, 3,5mm jack |
|--|---|

REMOTE CONTROL

1. Power on/off
 2. Eject disc
 3. - Short press; Bluetooth dial options
 4. - Short press; source select
- If Dual Zone is on, press to change Front Zone / Rear Zone
5. Increase volume
 6. Decrease volume
 7. Open Dual Zone settings
 8. - Manual seek (tuner)
 9. - Manual seek (tuner)
 10. Menu navigation buttons
 11. - Auto seek
 12. - Auto seek
 13. Confirm button
 14. - Play/pause (media play)
 15. - Select band
 16. - numeric buttons
 17. - short press; change display
 18. - short press; open function settings
 19. - short press; view function list
 20. Go to search menu (DVD play)
 21. Zoom (DVD play)
 22. Viewing angle (DVD)
 23. Adjust screen brightness
 24. View info
 25. Change audio language (DVD)
 26. Change or turn on/off subtitles
 27. Show title menu (DVD)

SYSTEM MENU

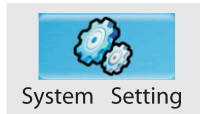


- Date set
- Clock set
- Time format (12h/24h)
- Beep tone
- Program value



- iX Bass
- Sub-w
- Bass
- Treble
- Middle
- Balance
- Fader
- 2-Zone



FLAT/POP/COUNTRY/
ROCK/JAZZ/REGGAE/
R&B/DANCE/CLASSIC

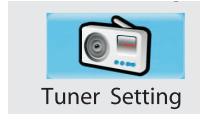


- AF (alternative frequency)
- TA on/off (traffic announcements)
- TA SEEK on/off
- TA Volume
- Region
- Tuner set (distance/local)
- Tuner area




- Standby display select
- Dimmer



- Shows unit system software version

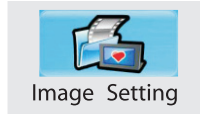

- My Gallery folder
- My Images folder
- Default settings
- Free memory

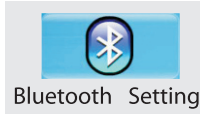

- Pairing, press rotary volume button (8) to activate
- 1. Select BT device
- 2. Enter 4-digit passcode on mobile phone and accept connection
- 3. Enter same passcode on mobile phone and accept connection
- Handsfree (select/disconnect)
- Audio Device (select/disconnect)
- Auto answer (yes/no)
- Phone volume