



HTT 101

Manual

GB

Before use

Included Items

Check to be sure the box includes all the supplied accessories shown below. Please contact the store where you purchased this unit if any of these accessories are missing or have been damaged during transportation.

Flit mat x 1
45 RPM adapter x 1
Unit x 1
Turntable cover x 1
AC adapter x 1
Owner manual x 1

Precautions for use

◆ Do not place anything on the turntable cover. Objects on the cover might cause noise due to vibrations or fall off, especially during playback.

◆ Avoid placing the unit in direct sunlight, close to a source of heat or in other similar conditions. Do not place the unit on top of an amplifier or other equipment that might generate heat that exceeds the operating temperature range of this unit. Doing so could cause discoloration, deformation or malfunction.

◆ As the unit could become warm during operation, always leave sufficient space around it for ventilation. When installing this unit, leave a little space between it and other devices and walls to allow good heat dissipation.

When placing it in a rack, for example, leave at least 35 cm open above it and 10 cm open behind it. Failure to provide these gaps could cause heat to build up inside and result in free.

◆ Do not move the unit during playback. During playback, the record rotates. Do not lift or move the unit during playback. Doing so may damage the record, the stylus, the cartridge or the unit.

◆ Always record the record before relocating or moving this unit. Moving the unit with a record on the turntable could damage the record, the stylus and the cartridge or could cause a malfunction.

◆ The voltage supplied to the unit should match the voltage as printed on the rear panel. IF you are in any doubt regarding this matter, consult an electrician.

Maintenance

If the surface of the unit gets dirty, wipe it with a soft cloth or use diluted mild liquid soap. Allow the surface of the unit to dry completely before using.

- ◆ Do not use chemical cleaning cloths, thinner or similar substances as they could damage the surface or the unit.

Caution

 
- ◆ Do not use chemical cleaning cloths, thinner or similar substances as they could For safety, disconnect the power cord from the socket before cleaning.

Notes about record to styluses

- ◆ Record styluses are precision parts, so handle them carefully to avoid bending or damaging their tips. If a stylus becomes bent or damaged, it might not be able to follow the audio groove precisely and could damage records or cause other malfunction.
- ◆ If a stylus becomes dirty, use a commercially available stylus cleaner or similar product to clean it.
- ◆ Do not rub the stylus tip forcefully with anything hard. Do not wipe the stylus with thinner or other chemicals. Doing so could harm it.

Replacing the stylus


- ◆ Lift the tone arm off the tone arm rest.
- ◆ At the front end of the tone arm, place the tip of your fingernail between the red stylus holder and the black cartridge housing as shown, press down on the red stylus holder until it separates form the cartridge housing.
- ◆ Completely remove the red stylus holder with worn stylus and discard it.
- ◆ Place the new red stylus holder with stylus under the cartridge housing. First, press upward on the back side of the stylus holder, and then press up on the front edge of the stylus holder until it snaps into place on the cartridge housing.

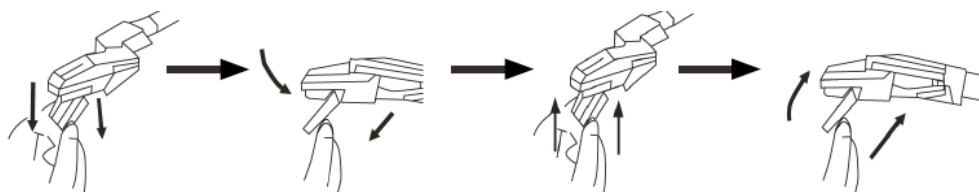

REPLACE THE CARTRIDGE FROM THE TONE ARM

PLEASE FOLLOW THE PROCEDURE BELOW.

 - ◆ Gently lift off the tone arm from the tone arm rest.
- ◆ By using your left hand to hold the tone arm and using your right hand to hold the rear portion of the cartridge. Then push the cartridge backwards and downwards according to the direction as shown to the left to separate the cartridge from the tone arm.
- ◆ Using either a tweezer or your fingers, carefully unplug the terminals to the new cartridge.
- ◆ Carefully connect the terminals to the new cartridge(not included).
- ◆ To re-install the new cartridge to the tone arm. First please lock the front end of the new cartridge on the hook of the tone arm.
- ◆ Press the rear side of the new cartridge upwards to lock it on the to the tone arm.

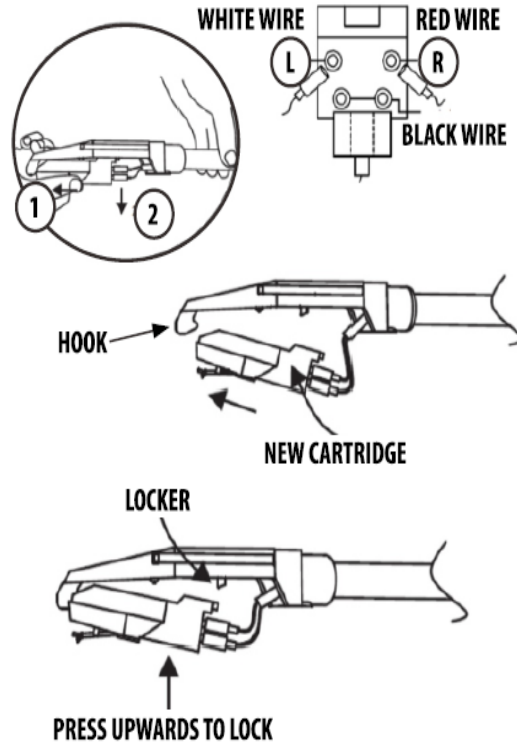

Caution

 
- ◆ Since loud noises could suddenly occur, put the unit into standby before changing the stylus.
- ◆ Be careful not to hurt your hand or the equipment.
- ◆ Be careful not to allow small children to accidentally swallow styluses.

TRANSPORTING THE SYSTEM

IMPORTANT!

To protect the turntable from the damage during transportation, a silver transit screw is located on the upper right of the turntable platform.


- ◆ Before playing, please use a screwdriver to turn the transit screw in clockwise direction (screw going down) completely to unlock the turntable.
- ◆ To lock the turntable again for transportation, please turn screw in counter-clockwise direction.

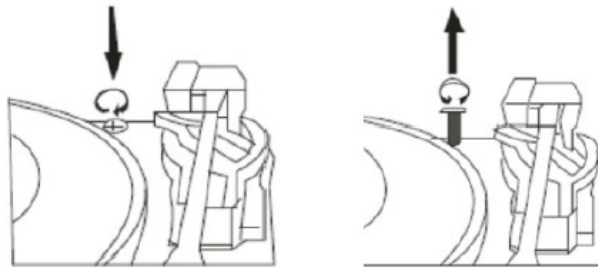

Belt Notice

- ◆ The red strap is wrapped around the belt, this allows you to use this red strap as a mounting aid.
- ◆ When need play unit, please get rid of tape firstly, then pick up two sides of red strap with your finger, wrapped around the belt to motor holder when you find it.

 Connections

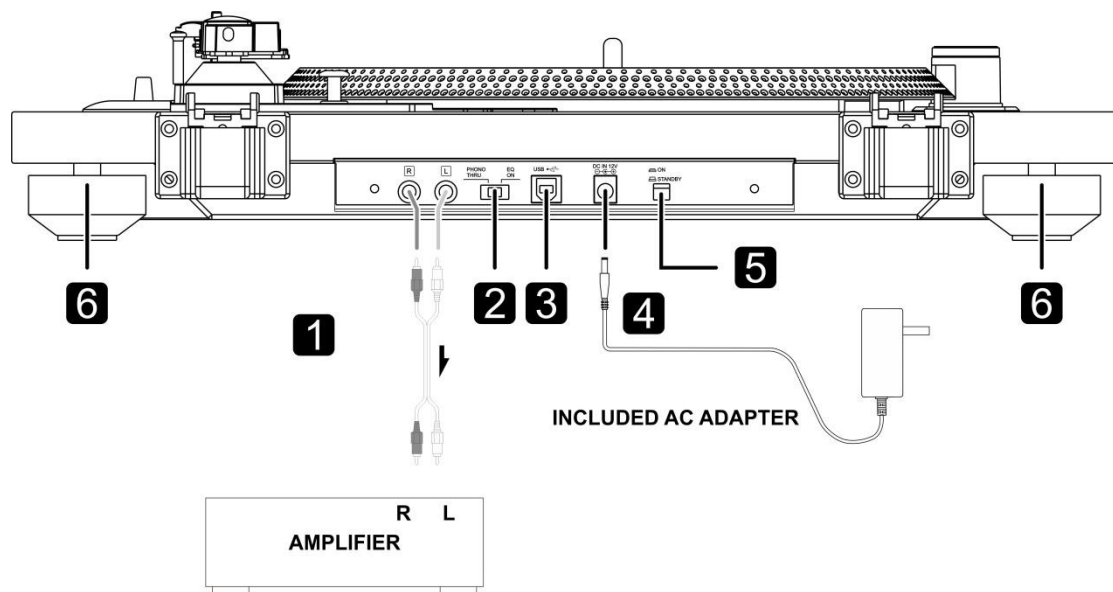


1. Analog audio output jacks(L/R)

These output analog audio signals.

The PHONO EQ switch setting changes the type of output signal.

 Use the included audio cable (or commercially available ones) to connect other equipment to the output jacks of this unit.



2 PHONO EQ(audio output setting) switch on

Signals that have been amplified by the built-in equalizer amp are output from the analog audio output jacks(L/R).

Caution

When set to ON, if connected to the PHONO inputs of an amplifier, for example, the output from speakers and headphones will be very loud, which could damage equipment or harm hearing.

3 USB port(USB B type)

Connect this to the USB port of a computer to convert the audio signal from this unit to digital and output it to the computer.

4 DC input connector

After completing all other connections, connect the included AC adapter to this jack.

Confirm that the power plug of the AC adapter is plugged into a power outlet.

- ◆ Unplug the power cord from the outlet when you are not planning to use the unit for an extended period of time.
- ◆ Do not use any AC adapter other than the one included.

 
Note

- ◆ Be sure to connect the power cord to an AC outlet that supplies the correct voltage. Connection to an outlet that supplies incorrect voltage could cause fire or electric shock.
- ◆ Hold the power plug when plugging it into an outlet or unplugging it. Never pull or yank on the power cord.
- ◆ Unplug the power cord from the outlet when you are not planning to use the unit from extended period of time.

5 Standby/On button

- ◆ Press the STANDBY/ON button to turn the unit on or put it in Standby.


Names and functions of parts

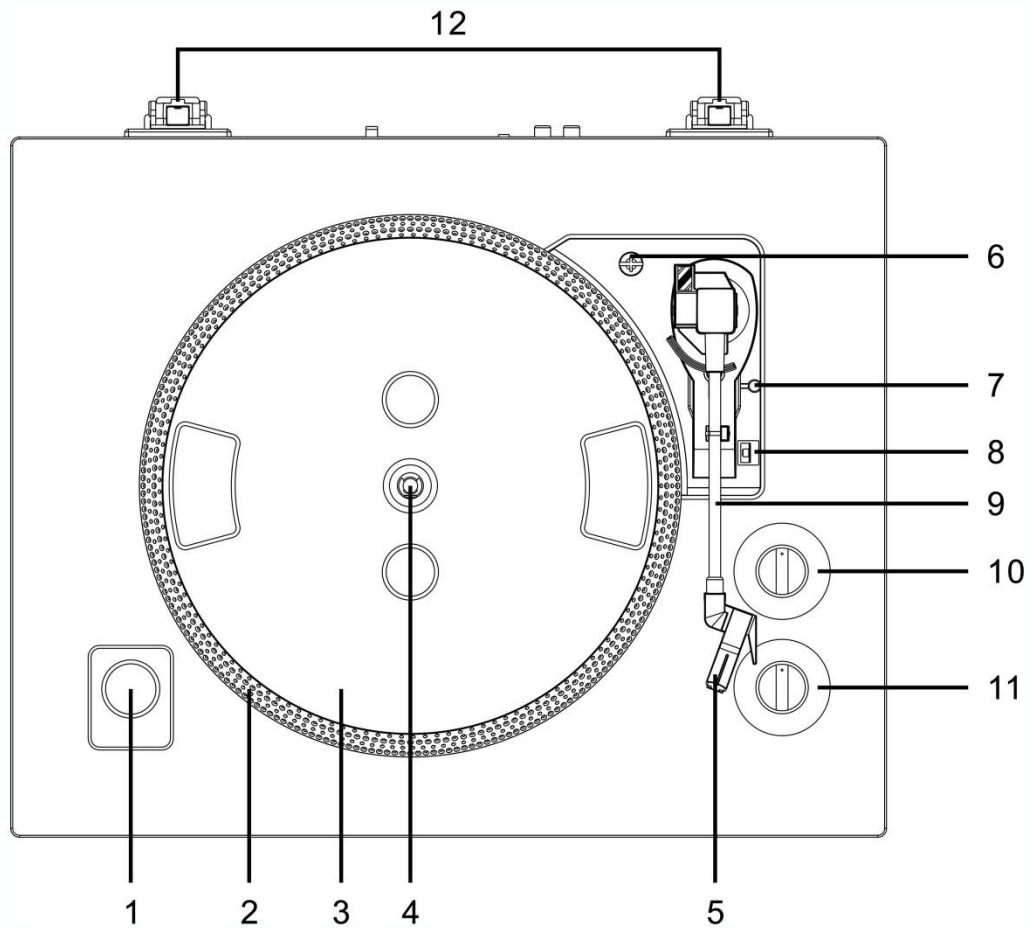

- | | | | |
|-----------------------|-----------------------|--------------------|-----------------------|
| 1 Power Switch/Strobe | 2 Strobe Dots | 3 Slit Mat | 4 Center Spindle |
| 5 Head shell | 6 Screw | 7 Cueing lever | 8 Speed select switch |
| 9 Tone arm | 10 Pitch Control Knob | 11 START/STOP knob | |

Turntable Dust Cover

 Attaching the turntable cover

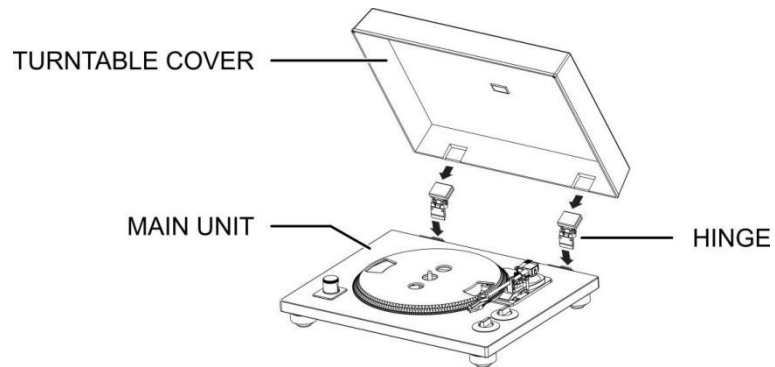


- ◆ Insert the hinges completely into the hinge holders at the left and right ends of the back of the main unit.
- ◆ Align the tops of the hinges with the turntable cover hinge holders and insert them.

Removing the turntable cover

Hold both edges of the turntable cover and lift it slowly to remove it along with the hinges from the unit. Then, remove the hinges from the turntable cover.

 Opening and closing the turntable cover

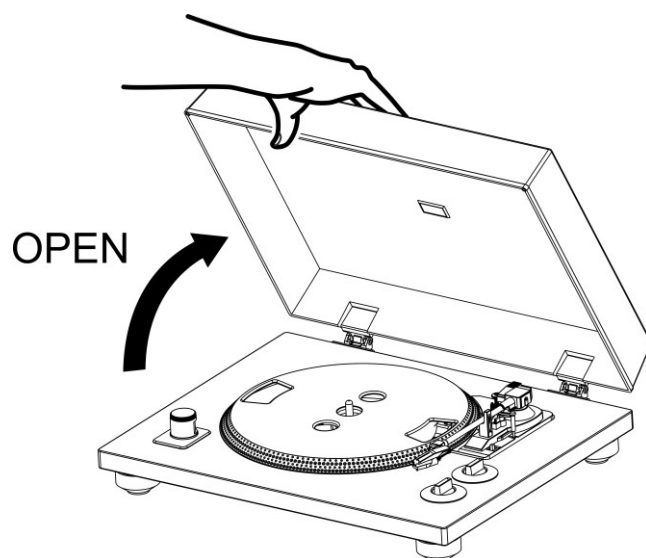

Opening

- ◆ Hold the front edge of the turntable cover and gently lift it open completely until it stops.
- ◆ The turntable cover will stay open in this position.

Closing

- ◆ Gently lower the turntable cover until it is closed.

Be careful not to pinch your hand when in opening and closing the turntable cover.

Handling records

Holding records

When holding a record or removing it from its sleeve, avoid touching the grooves by holding the record by its label and edge with one hand or by holding it by its edge with both hands.

Cleaning

- ◆ Fingerprints and dust on a record can cause noise and the sound to skip, as well as damage it record itself and the stylus. Use a commercially available record cleaner to clean records. Do not use thinner or anything other than a record cleaner. Such chemicals could harm the surface of the record.
- ◆ When using a record cleaner, wipe the surface of the record in a circular motion, following the grooves.

Precautions

 
- ◆ Do not leave records in places that are exposed to direct sunlight or are very hot or very humid. Leaving a record in such a condition for a long time could result in warping or other damage.
- ◆ Do not stack multiple records or place heavy objects on top of them. Do not leave records at an angle for long amounts of time either. Doing so could result in warping or other damage.
- ◆ Do not allow hard objects to directly touch the audio grooves. Doing so could cause scratches.
- ◆ After you finish playing a record, always put it back into its sleeve for storage. Leaving a record unprotected could result in warping or scratching.
- ◆ Do not use cracked records.

]


Basic operation

Playing records

- ◆ Press the STANDBY/ON button on the back of the unit to turn it on.

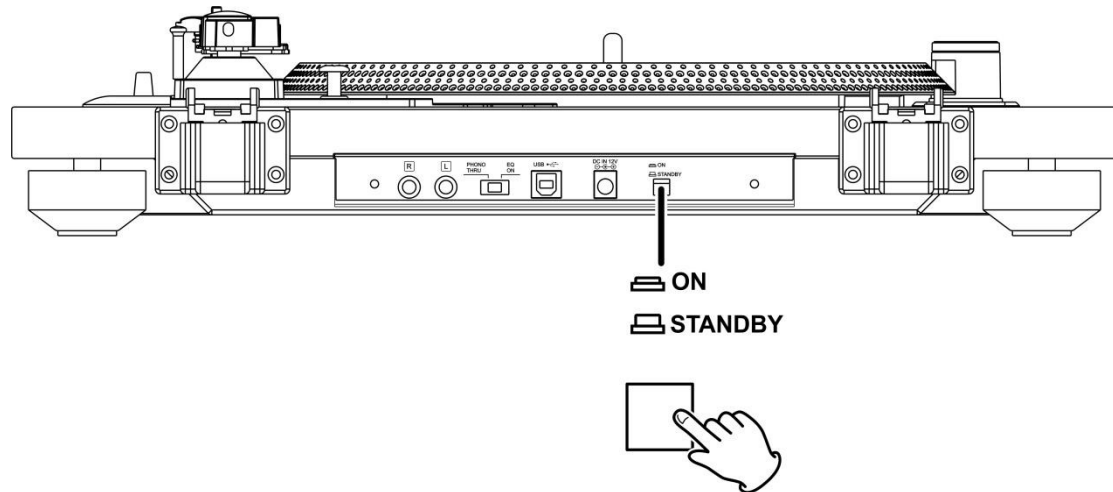

- ◆ Open the turntable cover slowly.

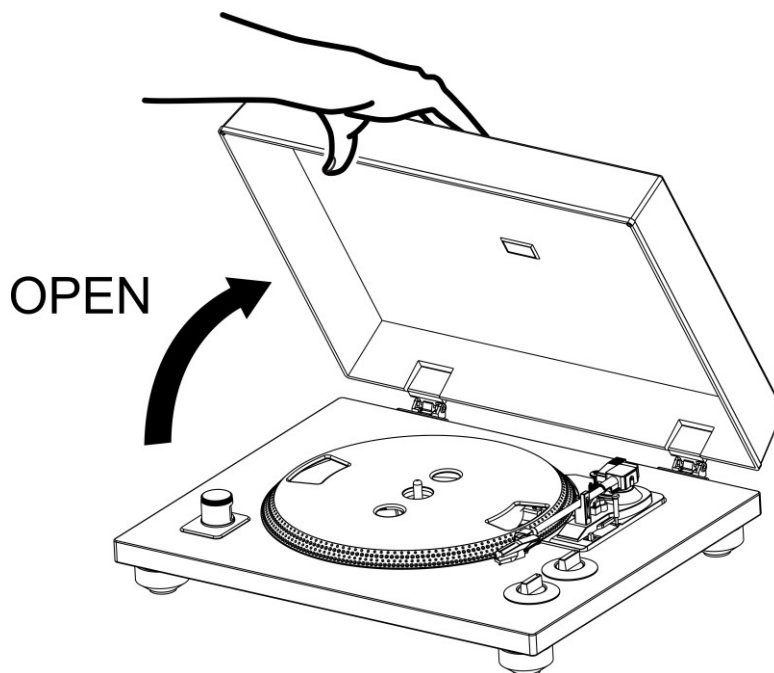 

- ◆ Place a record on the turntable. When playing a 45 RPM large-hole single record, use the included adapter.

- ◆ Set according to the rotation speed (RPM) of the record. The rotation speed can be set to 33 1/3 or 45 RPM.

- ◆ Turn the START/STOP rotation knob to START to start the turntable.
- ◆ When the START/STOP rotation knob is set to START, the turntable will start rotating and the blue LED will light.
- ◆ Move the tone arm clasp to the right to release the tone arm.
- ◆ Lift the cue lever.

You can also leave the cue lever down and moved the raised tone arm over the record and then lower the tone arm slowly to start playback.

- ◆ Move the tone arm to the edge of the record or the track where you want to start playback.

- ◆ Lower the cue lever.

Lower the tone arm slowly until the stylus touches the record and playback begins. We recommend that you close the turntable cover during record playback to avoid dust.

Do not place anything on the turntable cover. Objects on the cover might cause noise due to vibrations or fall off, especially during playback.

Caution

- ◆ During playback, do not touch the tone arm or the rotating record.
- ◆ Do not stop turntable rotation during playback.
- ◆ During record playback, feedback could occur if the volume is too loud. If this happens, lower the volume of the amplifier.

How to set pitch

- ◆ When the external adapter is connected and powered, turn the pitch function on automatically.
- ◆ Use the Pitch Adjust Knob in conjunction with the Pitch to vary the platter's rotational speed by as much as +/- 50%.

How to measure pitch

- ◆ Four rows of strobe dots on the platter edge are designed to measure and verify the platter speed.

- ◆ When the corresponding row of strobe dots appears to be stationary, the turntable will be at the operating speed percentage indicated below:

If the dots appear to be moving to the right, the platter is moving below rated speed; if they appear to be moving to the left, the platter is moving above rated speed.

When playback finishes

 
- ◆ Slightly lift the cue lever or the head-shell hook and return the tone arm to its resting position.
- ◆ Turn the START/STOP rotation knob to STOP to stop the turntable. When the turntable stops, the blue LED will also become unlit.

Recording with a computer

Connect this record player to a computer using a commercially-available USB cable to convert audio signals from a record to digital data and send them to the computer.

Connecting with a computer

- ◆ Connect this record player to a computer using a commercially-available USB cable to convert audio signals from a record to digital data and send them to the computer.

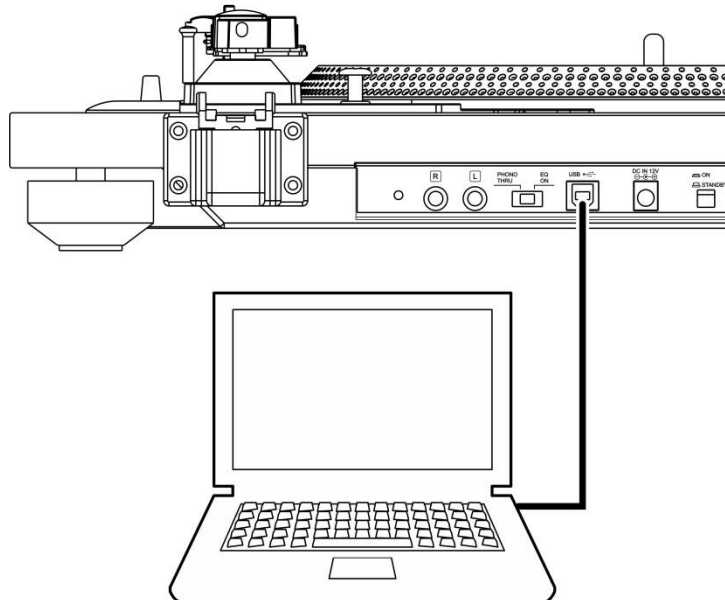

- ◆ Turn the computer on: confirm that the operating system is working correctly.
- ◆ Turn the record player on.
- ◆ When they are connected, the computer will automatically detect this unit's USB port and identify it as "USB Audio CODEC".

◆ To record audio from this record player using a computer, you must first install software that can be used for audio recording on the computer. Please download the software: Audacity as attached.

- Install Audacity software in your computer.
- Open the software.
- Click Append Record icon in the software: the encoding is going on.
- When finish the encoding, click STOP icon.
- Open the Files icon in the software and save the project.
- The project can be exported in MP3 or other audio format as you like.

◆ Reminder: When in encoding, please always select LINE mode, then you can record a better quality resources.

Specifications :

Operating voltage	DC15V/330 mA
Power Consumption	0.5W in Standby; 1.5W in operation
Dimensions(L*W*H)	453*362*108 mm
Unit Weight	4.12kg
Driving Method	Belt drive
Speeds	33-1/3 and 45RPM
S/N ratio	35dB
Cartridge type	Ceramic
Needle	Sapphire
Turntable	Plastic platter (11") diameter

DECLARATION OF CONFORMITY

GB

Caliber hereby declares that the item HTT101 is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU (RED), 2009/125/EC (ERP) and 2011/65/EU (RoHS).

FR

Par la présente Caliber déclare que l'appareil HTT101 est conforme aux exigences essentielles et aux autres dispositions pertinentes de la directive 2014/53/EU (RED), 2009/125/EC (ERP) et 2011/65/EU (RoHS).

DE

Hiermit erkl rt Caliber, dass sich das Ger t HTT101 in  bereinstimmung mit den grundlegenden Anforderung und  brigen einschl gigen Bestimmungen der Richtlinie 2014/53/EU (RED), 2009/125/EC (ERP) und 2011/65/EU (RoHS) befindet.

IT

Con la presente Caliber dichiara che questo HTT101   conforme ai requisiti essenziali ed alle altre disposizioni pertinenti stabilite dalla direttiva 2014/53/EU (RED), 2009/125/EC (ERP) e 2011/65/EU (RoHS).

ES Por medio de la presente Caliber declara que el HTT101 cumple con los requisitos esenciales y otra disposiciones aplicables o exigibles de la Directiva 2014/53/EU (RED), 2009/125/EC (ERP) y 2011/65/EU (RoHS).

PT

Caliber declara que este HTT101 est  conforme com os requisitos essenciais e outras disposi es da Directiva 2014/53/EU (RED), 2009/125/EC (ERP) e 2011/65/EU (RoHS).

S

H rmed intygar Caliber att denna HTT101 Pro st r i  verensst mmelse med de v sentliga egenskapskrav och  vriga relevanta best mmelser som framg r av direktiv 2014/53/EU (RED), 2009/125/EC (ERP) och 2011/65/EU (RoHS).

PL

Niniejszym Caliber o wiadcza,  e HTT101 jest zgodne z zasadniczymi wymaganiami oraz innymi stosownymi postanowieniami Dyrektywy 2014/53/EU (RED), 2009/125/EC (ERP) i 2011/65/EU (RoHS).

DK

Undertegnede Caliber erkl rer hermed, at f lgende udstyr HTT101 overholder de v sentlige krav og  vrige relevante krav i direktiv 2014/53/EU (RED), 2009/125/EC (ERP) og 2011/65/EU (RoHS).

EE

K esolevaga kinnitab Caliber seadme HTT101 vastavust direktiivi 2014/53/EU (RED), 2009/125/EC (ERP) ja 2011/65/EU (RoHS) p hin uetele ja nimetatud direktiivist tulenevatelle teistele asjakohastele s tetele.

LT

 iuo Caliber deklaruoja, kad  is HTT101 atitinka esminius reikalavimus ir kitas 2014/53/EU (RED), 2009/125/EC (ERP) ir 2011/65/EU (RoHS) Direktyvos nuostatas.

FI

Caliber vakuuttaa t ten ett  HTT101 tyyppinen laite on direktiivin 2014/53/EU (RED), 2009/125/EC (ERP) ja 2011/65/EU (RoHS) oleellisten vaatimusten ja sit  koskevien direktiivin muiden ehtojen mukainen.

IS

H r me  l ysi Caliber yfir því a  HTT101 er  samr emi vi  grunnkr fur og a rar kr fur, sem ger ar eru i tilskipun 2014/53/EU (RED), 2009/125/EC (ERP) og 2011/65/EU (RoHS).

NO

Caliber erkl rer herved at utstyret HTT101 er i samsvar med de grunn-leggende krav og  vrige relevante krav i direktiv 2014/53/EU (RED), 2009/125/EC (ERP) og 2011/65/EU (RoHS).

NL

Hierbij verklaart Caliber dat het toestel HTT101 in overeenstemming is met de essenti le eisen en de andere relevante bepalingen van richtlijn 2014/53/EU (RED), 2009/125/EC (ERP) en 2011/65/EU (RoHS).



Latest declaration form can be found at:
www.caliber.nl/media/forms/DeclarationHTT101.pdf



GB Old appliances and/or batteries must not be disposed with garbage!

If the device/battery can not be used anymore, every user is legally obliged to dispose of old appliances and/or batteries separated from the garbage, e.g. at a collection point of his municipality/district.



FR Les vieux appareils et/ou les piles ne doivent pas être jetés avec les ordures ménagères !

Si l'appareil/la pile ne peut plus être utilisé(e), chaque utilisateur est légalement dans l'obligation de mettre au rebut les vieux appareils et/ou les piles séparément des ordures ménagères, par ex. dans un point de collecte de sa municipalité/de son quartier.

DE Altgeräte und/oder Altbatterien müssen getrennt entsorgt werden!

Benutzer sind gesetzlich verpflichtet, Altgeräte und/oder Altbatterien am Ende ihrer Nutzungsdauer getrennt zu entsorgen, z.B. an örtlich verfügbaren Sammelstellen.

IT Dispositivi e/o batterie vecchie non devono essere smaltiti con i rifiuti!

Se il dispositivo/batteria non può più essere utilizzato, ogni utente è obbligato per legge a smaltire i vecchi dispositivi e/o batterie separatamente dai rifiuti, ad es.: in un centro per la raccolta differenziata locale/comunale.

ES ¡Los dispositivos viejos y/o baterías no deben desecharse junto con la basura doméstica!

Si el dispositivo/batería ya no funciona, cada usuario está legalmente obligado a desechar sus aparatos y/o baterías de forma separada de la basura doméstica (por ejemplo, en un punto de recolección de su municipio/distrito).

PT Os aparelhos avariados e/ou as pilhas ou baterias usadas não devem ser eliminados juntamente com o lixo comum! Se o aparelho e/ou as pilhas ou baterias já não puderem ser utilizados, o utilizador tem o dever legal de separar os aparelhos e as pilhas/baterias usados do lixo comum e depositá-los num ponto de recolha para reciclagem na sua região

SE Gamla apparater och/eller batterier får inte kasseras med avfall!

Om enheten/batteriet inte längre kan användas är varje användare skyldig att slänga gamla apparater och/eller batterier avskilt från avfallet, t.ex. på en insamlingsplats i personens kommun/distrikt.

PL Starych urządzeń i baterii nie wolno wyrzucać z odpadkami domowymi!

Jeśli urządzenie lub bateria nie będzie więcej używane, każdy użytkownik jest prawnie zobowiązany do wyrzucania starych urządzeń i/lub baterii oddzielnie, np. w punkcie zbiórki swojej gminy lub dzielnicy.

GR Οι παλιές συσκευές ή/και μπαταρίες δεν πρέπει να απορρίπτονται μαζί με τα οικιακά απορρίμματα!

Αν μια συσκευή/μπαταρία δεν μπορεί πλέον να χρησιμοποιηθεί, οι χρήστες είναι νομικά υποχρεωμένοι να απορρίπτουν τις παλιές συσκευές ή/και μπαταρίες ξεχωριστά από τα οικιακά απορρίμματα, π.χ. σε σημείο συλλογής του δήμου/της περιφέρειάς τους.

SK/CZ Staré spotrebiče a/alebo použité batérie nesmiete likvidovať s domovým odpadom!

Ak sa už zariadenie/batéria nebude dať viac používať, každý používateľ je povinný likvidovať staré spotrebiče a/alebo batérie oddelene od odpadu, napríklad na zbernom mieste svojej obce/regiónu.

NL Oude apparaten en/of batterijen mogen niet bij het huisvuil!

Mocht het apparaat/batterij niet meer kunnen worden gebruikt, dan is iedere gebruiker wettelijk verplicht, oude apparaten en/of batterijen gescheiden van het huisvuil, bijv. bij een inzamelpunt van zijn gemeente/zijn wijk, af te geven.



**APPAREIL ET
EMBALLAGES À TRIER**

**Pour en savoir plus :
www.quefairedemesdechets.fr**

WWW.CALIBER.NL
CALIBER EUROPE BV • Kortakker 10 • 4264 AE Veen • The Netherlands