







Instruction manual for HWS 401



Index:

No. 1 Caliber Smart
Home app

No. 2 Register / Login

No. 3 Add device('s)

• EZ-mode

AP-mode

No. 4 Control device

No. 5 Profile

No. 6 Scene's & Automation

No. 7 Voice control

No. 8 Trouble shooting

No. 9 Specifications



Click to jump to


The pictures/screenshots/illustrations used in this manual are subject to change without notification. Also they may differ in appearance, depending on the device you use, iOs or Android, tablet or phone etc. Product and software update periodically, the number and app interface in this manual are only shown as an example. No extra notification on further changes.

Download and install Caliber Smart Home app



Use your phone to scan the QR code below or search "Caliber Smart Home" in the app Store or Google play to download and install the app



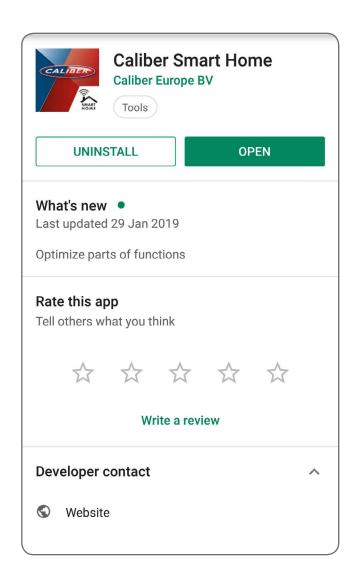

Index:

No. 1 Caliber Smart
Home app

No. 2 Register / Login

No. 3 Add device('s)

- EZ-mode
- AP-mode

No. 4 Control device

No. 5 Profile

No. 6 Scene's & Automation

No. 7 Voice control

No. 8 Trouble shooting




Register / Login / Request password





Register


Setup an account for 'Caliber Smart Home', or sign-in if you already have an account.

- 1. Tap "Register" in the lower centre "img 1"
- 2. The system automatically determines your country / area. You can also select your country code by yourself.
 - Enter the cellphone number / E-mail and tap "Obtain verification code" "img 2" **note:** Change to "register by phone" for using a phone number to register.
- 3. Enter the verification code you received "img 3". If you didn't received the verification code within 30min. please try the previous step again
- 4. Choose a password for your account "img 4", tap "Completed" to finish your registration.

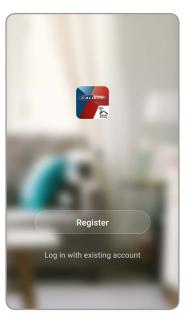

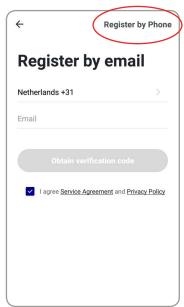

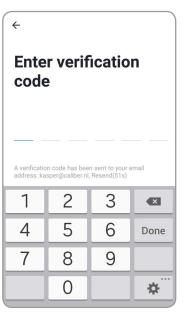

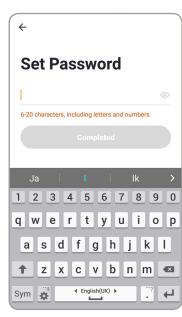

Index:

No. 1 Caliber Smart
Home app

No. 2 Register / Login

No. 3 Add device('s)

EZ-mode

AP-mode

No. 4 Control device

No. 5 Profile

No. 6 Scene's & Automation

No. 7 Voice control


No. 8 Trouble shooting





Register / Login / Request password



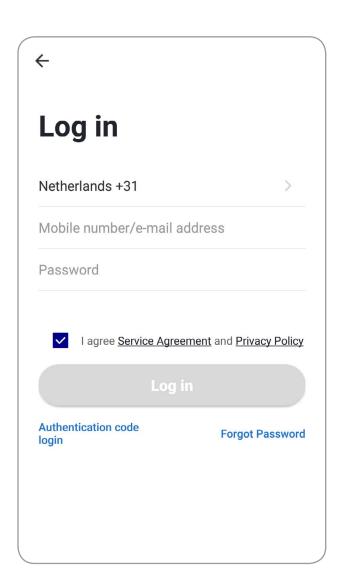

Account+password sign-in

- 1. The system will automatically determine your country / area or you could select manually
- 2. Enter your registered cellphone number or email and password, sign in to the system

Index:

No. 1 Caliber Smart
Home app

No. 2 Register / Login

No. 3 Add device('s)

• EZ-mode

• AP-mode

No. 4 Control device

No. 5 Profile

No. 6 Scene's & Automation

No. 7 Voice control

No. 8 Trouble shooting




Register / Login / Request password




Forgot password


If you forgot your account of "Caliber Smart Home", you can reset the account password by "Forgot password"

- 1. Tap "Forgot password", as shown in "img 1"
- 2. The system automatically determines your country / area. You can also select your country code by yourself. Enter the cellphone number/E-mail and tap "Obtain verification code", as shown in "img 3"
- 3. Enter the verification code you received "img 3". If you didn't received the verification code within 30min. please try the previous step again.
- 4. Choose a password for your account "img 4", tap "Completed" to finish your registration.

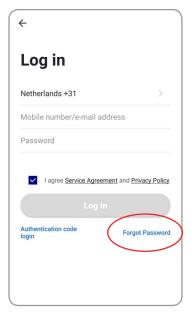

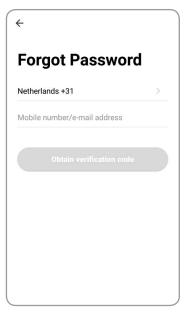



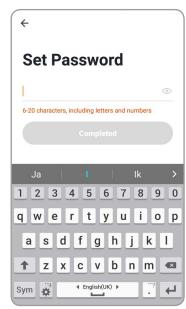

<u>Index:</u>

No. 1 Caliber Smart
Home app

No. 2 Register / Login

No. 3 Add device('s)

EZ-modeAP-mode

 
No. 4 Control device

No. 5 Profile

No. 6 Scene's & Automation

No. 7 Voice control


No. 8 Trouble shooting





ADD device('s) EZ-mode




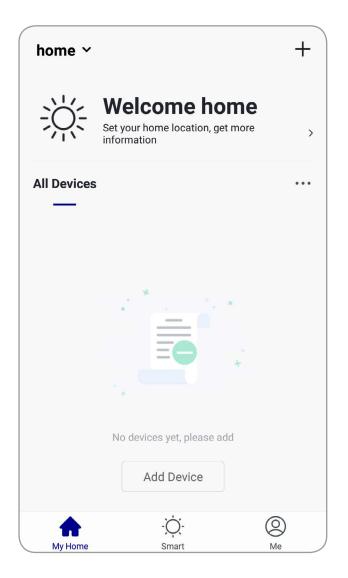


- 1. Go to the app, tap "+" in the upper right of this page to add device's as shown in the picture to the left.
- 2. In this case, select "Smoke Sensor (Wifi)"
- 3. For EZ (Easy install) mode, please make sure the device's indicator light flashes quickly, tap "Confirm indicator rapidly blink" to continue.

Remarks:

App provides two methods of network connection: **EZ mode** and **AP mode**. Please use **EZ mode** as default. If it failed, please tap "**AP mode**" in the upper right to try connecting again.

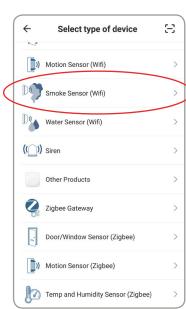

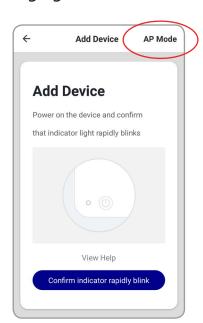

Index:

No. 1 Caliber Smart
Home app

No. 2 Register / Login

No. 3 Add device('s)

EZ-mode

• AP-mode

No. 4 Control device

No. 5 Profile

No. 6 Scene's & Automation

No. 7 Voice control

No. 8 Trouble shooting






ADD device in EZ mode (default)

Press and hold the reset button (3) on the front for 5 sec. The LED will blink fast in EZ mode (3 times/per second).

Remarks: If indicator light is slowly flashing (Once per 2s), it indicates that device is under AP mode. Long press reset button for 5 seconds to switch the modes.

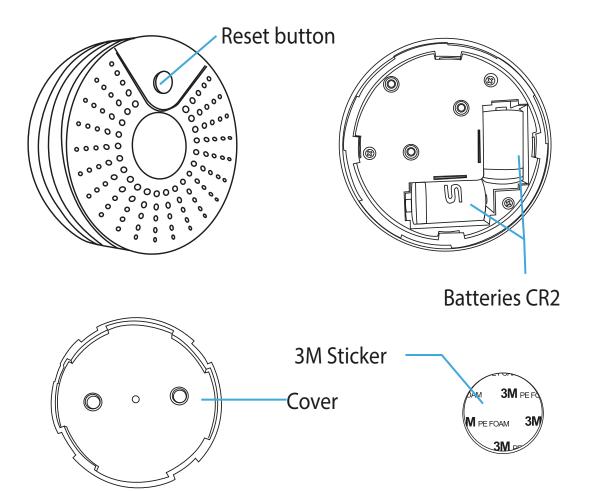

<u>Index:</u>

No. 1 Caliber Smart
Home app

No. 2 Register / Login

No. 3 Add device('s)

• EZ-mode

AP-mode

No. 4 Control device

No. 5 Profile

No. 6 Scene's & Automation


No. 7 Voice control

No. 8 Trouble shooting



ADD device('s) EZ-mode



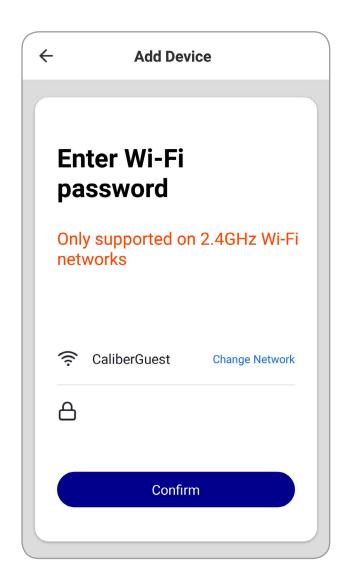

ADD device in EZ mode (default)

Next step: confirm the WiFi for device connection and enter the password. Tap "Confirm" and start connecting the device. (remarks: only supports 2.4G Wi-Fi network), as shown in the picture.

The connection process takes up to 30 sec. If **EZ mode** fails, try **AP mode**.

Remarks:

The purpose of this step is to let the "Caliber Smart Home" app know which router to use for Wi-Fi network connection. After a successful setup, the device will automatically connect to the Wi-Fi network.

Index:

No. 1 Caliber Smart
Home app

No. 2 Register / Login

No. 3 Add device('s)

• EZ-mode

• AP-mode

No. 4 Control device

No. 5 Profile

No. 6 Scene's & Automation

No. 7 Voice control

No. 8 Trouble shooting




ADD device('s) EZ-mode successful




Connecting

Now the connection status shows. "Device added!" notification will show after device is successfully connected. Tap "Completed" and the interface jump to the device's user interface. Then you could start making changes or monitor the device.

Tap the edit symbol : **∠** or to make changes in the name etc.

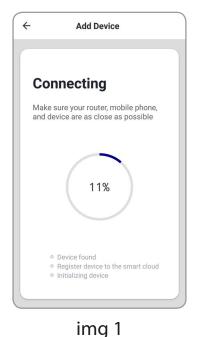



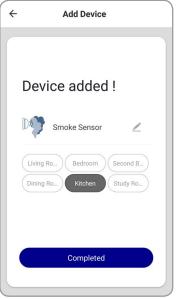



Index:

No. 1 Caliber Smart
Home app

No. 2 Register / Login

No. 3 Add device('s)

- EZ-mode
- AP-mode

No. 4 Control device

No. 5 Profile

No. 6 Scene's & Automation

No. 7 Voice control

No. 8 Trouble shooting

img 2 img 3 img 4



ADD device('s) AP-mode



ADD device in AP mode (alternative mode, Hotspot)


When the internet connection is unstable, the app will show a message as in "img 1" The connection has failed, now it's time to try again in **AP-mode**

- 1. Tap "+" (ADD Device)
- 2. Choose **AP-Mode** on the top right of the screen.
- 3. Press and hold the reset button (3) on the rear for 5 sec.


 Press and hold the button again for 5 sec. The LED indicator will blink slowly in blue.
- 4. Enter the password of your Wi-Fi network and confirm.

Note: If you're installing a different product, please tap "view help" to see product specific instructions per connection mode on screen.



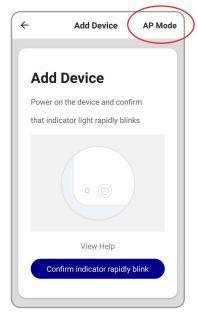



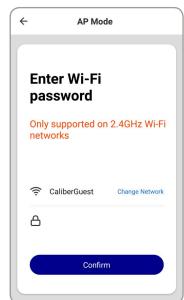

<u>Index:</u>

No. 1 Caliber Smart
Home app

No. 2 Register / Login

No. 3 Add device('s)

• EZ-mode

• AP-mode

No. 4 Control device

No. 5 Profile

No. 6 Scene's & Automation

No. 7 Voice control

No. 8 Trouble shooting





ADD device('s) AP-mode successful



ADD device in AP mode (manual mode, Hotspot)


6. Connect to device's hotspot in Wi-Fi list 'SmartLife_xxxx' to finish the Wi-Fi connection. App will jump to "connection successful" page when the Wi-Fi connection process is complete.


Note: In some cases, depending on your phone or table, you might have to return to the "Caliber Smart Home" app manually for the connection to continue.


Connecting


Now the connection status shows. "Device added!" notification will show after device is successfully connected. Tap "Completed" and the interface jump to the device's user interface. Then you could start making changes or monitor the device.

Tap the edit symbol : **∠** or to make changes in the name etc.

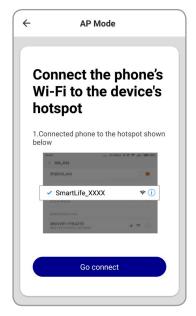

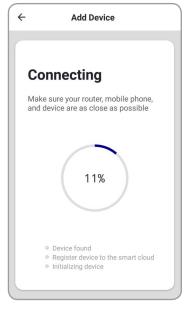

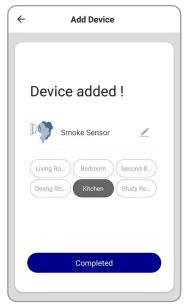

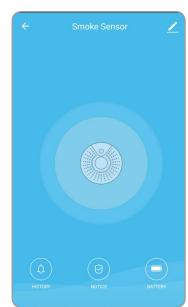

Index:

No. 1 Caliber Smart
Home app

No. 2 Register / Login

No. 3 Add device('s)

• EZ-mode

AP-mode

 
No. 4 Control device

No. 5 Profile

No. 6 Scene's & Automation

No. 7 Voice control


No. 8 Trouble shooting





ADD device('s) AP-mode fail



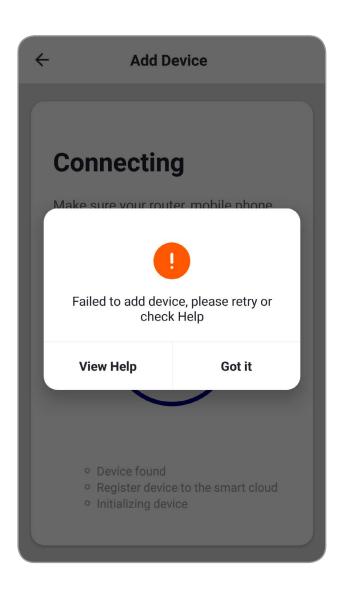

Remarks:

If your app interface is shown as in the picture, it means that the network connection failed. You could try connecting again.

If connection is fails, please refer to the <u>Trouble</u> <u>shooting</u> page or "View Help". If you can't find your answers, please submit the user feedback in the app. Our staff will help you to solve the problems.

Index:

No. 1 Caliber Smart
Home app

No. 2 Register / Login

No. 3 Add device('s)

• EZ-mode

• AP-mode

No. 4 Control device

No. 5 Profile

No. 6 Scene's & Automation


No. 7 Voice control

No. 8 Trouble shooting



Control device



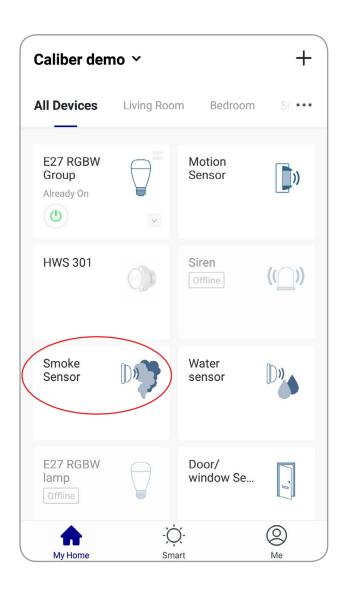

Control device

After the device is connected successfully, tap "My Home" at the bottom. The device name shows in the list. Tap it to enter the control panel of the device (Smoke sensor)

Remarks:

When device is online, operation via shortcuts is supported; When the device is offline, device displays "device is offline" and is greyed out.

Index:

No. 1 Caliber Smart
Home app

No. 2 Register / Login

No. 3 Add device('s)

• EZ-mode

• AP-mode

No. 4 Control device

No. 5 Profile


No. 6 Scene's & Automation

No. 7 Voice control

No. 8 Trouble shooting






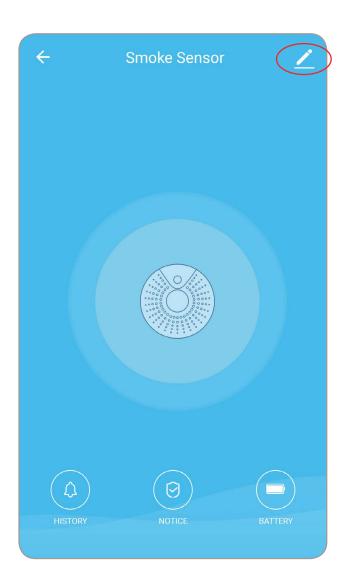

Control device

From this page, all device settings can be altered.

Tap the edit symbol : <u>✓</u> or : to make changes in name, location, share settings etc.

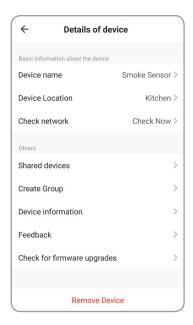

Index:

No. 1 Caliber Smart
Home app

No. 2 Register / Login

No. 3 Add device('s)

• EZ-mode

AP-mode

No. 4 Control device

No. 5 Profile

No. 6 Scene's & Automation

No. 7 Voice control

No. 8 Trouble shooting



Control device






History

Motion records with date and time

Setting

Enable or disable push notifications. Events will still be written in the history

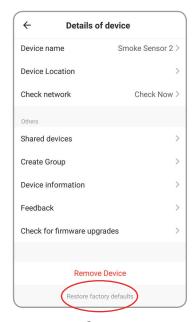

Restore factory defaults

This deletes all motion records and will remove the device.

Index:

No. 1 Caliber Smart
Home app

No. 2 Register / Login

No. 3 Add device('s)

• EZ-mode

• AP-mode

No. 4 Control device

No. 5 Profile


No. 6 Scene's & Automation

No. 7 Voice control

No. 8 Trouble shooting






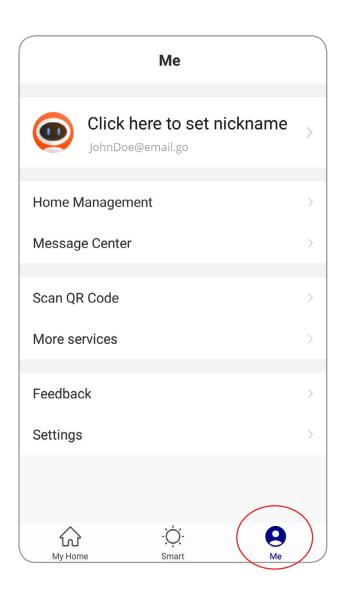

Profile (Me)

In order to make full use of the functionality of this app and your Caliber Smart Home devices, make your home situation match the situation in the app.

- 1. Choose family name
- 2. Manage your rooms
- 3. Set the location, for area automations
- 4. Add members to the family

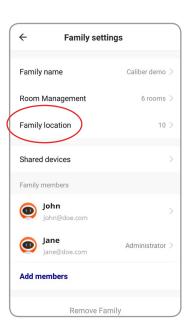



Index:

No. 1 Caliber Smart
Home app

No. 2 Register / Login

No. 3 Add device('s)

- EZ-mode
- AP-mode

No. 4 Control device

No. 5 Profile

No. 6 Scene's & Automation

No. 7 Voice control

No. 8 Trouble shooting




Scene's & Automation





Scene's


You can combine devices to do 'tasks' in a "scene". Go to Smart (img1)
The next pages describes general information. Some products cannot preform scene's

- 1. Tap"+" in the upper right of the page to create a new smart scene.
- 2. Tap "scene" img 2
- 3. Enter life scene name, add task, tap "Save", as shown in the picture. A smart scene has been created.
- 3. You can also change the scene you have already created (img1), change scene name, change task or delete smart scene etc.

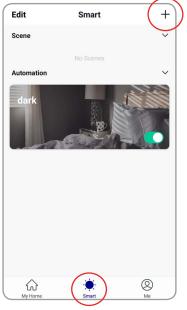

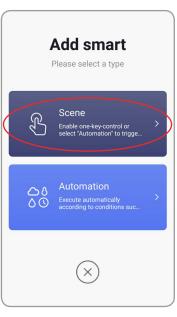

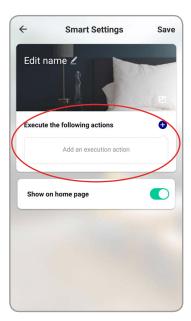

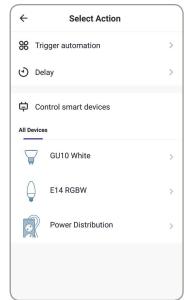

Index:

No. 1 Caliber Smart
Home app

No. 2 Register / Login

No. 3 Add device('s)

EZ-modeAP-mode

No. 4 Control device

No. 5 Profile

No. 6 Scene's & Automation

No. 7 Voice control

No. 8 Trouble shooting






Scene's & Automation





Automation


You can execute automations, when conditions are met.

- 1. Tap"+" in the upper right of the page to create a new smart scene
- 2. Tap "Automation"
- 3. Choose which conditions should be met "img3".
- 4. Choose what 'task /action' should be executed "img3".
- 5. img4 shows an example (This might include a different product). The Smart light group "E27 RGBW" switches ON when the sun sets. For this function you need to set your location, see <u>control device</u>.

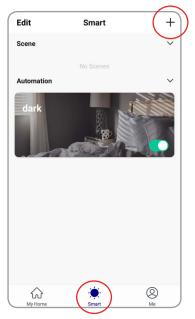

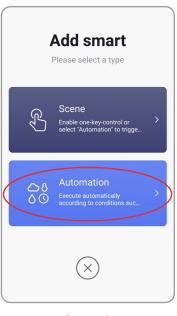

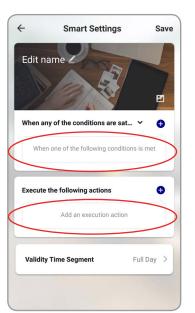

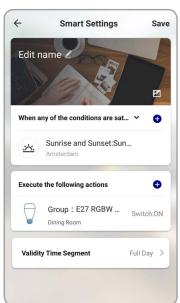

Index:

No. 1 Caliber Smart
Home app

No. 2 Register / Login

No. 3 Add device('s)

• EZ-mode

• AP-mode

No. 4 Control device

No. 5 Profile

No. 6 Scene's & Automation

No. 7 Voice control

No. 8 Trouble shooting





3RD Party voic∈ control



Voice control

Most of our Smart Home products support 3rd party voice control. Instructions how to connect can be found in the links below:

Connect with Google Home

Webshop.caliber.nl/media/SmartHome/Caliber_in_GoogleHome.pdf

Connect with Amazon Alexa

Webshop.caliber.nl/media/SmartHome/Caliber with Amazon-Alexa.pdf

Index:

No. 1 Caliber Smart
Home app

No. 2 Register / Login

No. 3 Add device('s)

• EZ-mode

• AP-mode

No. 4 Control device

No. 5 Profile

No. 6 Scene's & Automation

No. 7 Voice control

No. 8 Trouble shooting



Trouble shooting



Possible reasons why a device cannot be added:

The device is not powered on 2. WiFi signal is strong and stable, distance between device and router should be not too far

3. The smartphone cannot connect to WiFi

Wifi password not correct 4.

5. The device is in configuration state (When a device needs to be added, you need to bring it into WiFi configuration state)

You selected a 5GHz network (with dual band routers) Devices only support 6. 2.4GHz network

Router issues:

1.

Encryption mode should be WPA2-PSK type, Authentication type AEX or set to "automatic".

Wireless mode cannot be 11n only

Max number of connected devices has reached upper limit of router. Disconnect 3. other devices from WiFi

Index:

No. 1 Caliber Smart Home app

No. 2 Register / Login

No. 3 Add device('s)

• EZ-mode

AP-mode

No. 4 Control device

No. 5 Profile

No. 6 Scene's & **Automation**

No. 7 Voice control

No. 8 Trouble shooting



No. 9 Specifications



1. PRODUCT DESCRIPTION

HWS401 is a Smoke and heat detector. When the local temperature exceeds 50°C, the sensor will trigger an alarm. When smoke is detected, the sensor will sound an alarm ringtone and push notification to your smartphone.

2. FEATURES

- Works with IFTTT
- Wireless smoke sensor
- Activation when smoke and/or heat is detected
- 90dB acoustic siren
- Push notification on app
- History records
- Trigger for scenario's (E.G: turn lights ON when smoke is detected)
- Works on 2x CR2 batteries (included)
- Size: Ø68mm x 28(H) mm

Working current: Max 100mA Standby current: 24.8µA 2x CR2 3V Battery capacity: Standby time ± 5 years

Working time ± 1 years (20 times/day)

>50°C Alarm temperature: Working humidity: 20% ~ 85% Sound intensity: 90dB/1m

Wireless transmitting/

Receiving: 2.4GHz-2.484Ghz Network protocol: IEEE802.11b/g/n

Wireless distance: Max. 45m Working temp.: $-0^{\circ} + 60^{\circ}C$

68(W) x 28(D) x 68(H) mm Size:

Set consists of: Smoke sensor HWS401

Manual

Bag mounting material Mounting sticker Batteries 2x CR2

We are continuously improving / updating our products and product information. It's therefore possible that there is a slight difference between the description in this manual to the operation of the product.

If something is different or not clear; always check our website for the most current manual version. The (app) images and illustrations used are indicative and may vary per device and version

Index:

No. 1 Caliber Smart Home app

No. 2 Register / Login

No. 3 Add device('s)

• EZ-mode AP-mode

No. 4 Control device

No. 5 Profile

No. 6 Scene's & **Automation**

No. 7 Voice control

No. 8 Trouble shooting





Index:

No. 1 Caliber Smart
Home app

No. 2 Register / Login

No. 3 Add device('s)

• EZ-mode

• AP-mode

No. 4 Control device

No. 5 Profile

No. 6 Scene's & Automation

No. 7 Voice control

No. 8 Trouble shooting

No. 9 Specifications

All rights reserved

The pictures used in this manual are Android app interface, iOS version is a bit different Product and software update periodically, the number and app interface in this manual are only shown as an example. No extra notification on further changes.

Wifi Freq range: 2402-2480 Mhz, Max e.r.p: <100mW/20dBm

The Apple logo is a trademark of Apple Inc., registered in the U.S. and other countries.

Tuya word mark and logos are registered trademarks owned by Tuya, Inc. and any use of such marks by Caliber Europe BV is under license. Other trademarks and trade names are those of their respective owners.

Google Play and the Google Play logo are trademarks of Google LLC. Amazon Alexa logo are trademarks of Amazon Alexa. IFTTT logo are trademarks of IFTTT.





Thank you!

Index:

No. 1 Caliber Smart Home app

No. 2 Register / Login

No. 3 Add device('s)

• EZ-mode

AP-mode

No. 4 Control device

No. 5 Profile

No. 6 Scene's & **Automation**

No. 7 Voice control

No. 8 Trouble shooting



