 




EASY INSTALL
ANYONE CAN DO IT

Instruction manual for HWS 701

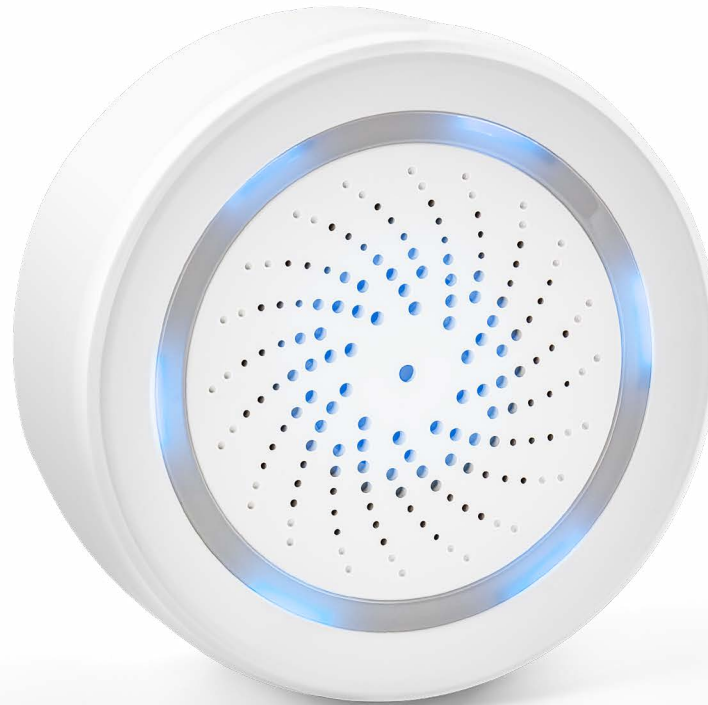

Index:

[No. 1 Caliber Smart Home app](#)

[No. 2 Register / Login](#)

[No. 3 Add device\(s\)](#)

- [EZ-mode](#)
- [AP-mode](#)

[No. 4 Control device](#)

[No. 5 Profile](#)

[No. 6 Scene's & Automation](#)

[No. 7 Voice control](#)

[No. 8 Trouble shooting](#)

[No. 9 Specifications](#)



Click to jump to



Use your phone to scan the QR code below or search "Caliber Smart Home" in the app Store or Google play to download and install the app



The screenshot shows the app page for "Caliber Smart Home" by Caliber Europe BV. At the top left is the app icon, which is a red and blue shield with the Caliber logo. To the right of the icon is the app name "Caliber Smart Home" and the developer name "Caliber Europe BV". Below the developer name is a "Tools" button. There are two buttons: "UNINSTALL" (white with a green border) and "OPEN" (solid green). Below these buttons is a "What's new" section with a green dot, indicating an update. It says "Last updated 29 Jan 2019" and "Optimize parts of functions". Below that is a "Rate this app" section with the text "Tell others what you think" and five empty star icons. Below the stars is a "Write a review" button. At the bottom is a "Developer contact" section with an upward arrow and a "Website" link with a globe icon.

Index:

[No. 1 Caliber Smart Home app](#)

[No. 2 Register / Login](#)

[No. 3 Add device\(s\)](#)
• [EZ-mode](#)
• [AP-mode](#)

[No. 4 Control device](#)

[No. 5 Profile](#)

[No. 6 Scene's & Automation](#)

[No. 7 Voice control](#)

[No. 8 Trouble shooting](#)

[No. 9 Specifications](#)



Register

Setup an account for 'Caliber Smart Home', or sign-in if you already have an account.

1. Tap "Register" in the lower centre "img 1"
2. The system automatically determines your country / area. You can also select your country code by yourself.
Enter the cellphone number / E-mail and tap "Obtain verification code" "img 2"
note: Change to "register by phone" for using a phone number to register.
3. Enter the verification code you received "img 3". If you didn't received the verification code within 30min. please try the previous step again
4. Choose a password for your account "img 4", tap "Completed" to finish your registration.

Index:

[No. 1 Caliber Smart Home app](#)

[No. 2 Register / Login](#)

[No. 3 Add device\(s\)](#)
 • [EZ-mode](#)
 • [AP-mode](#)

[No. 4 Control device](#)

 
[No. 5 Profile](#)

[No. 6 Scene's & Automation](#)


[No. 7 Voice control](#)

[No. 8 Trouble shooting](#)


[No. 9 Specifications](#)

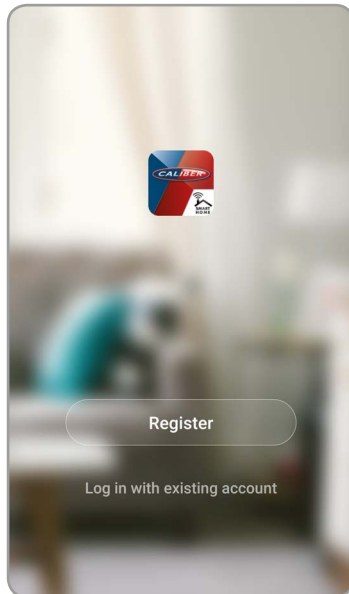


img 1

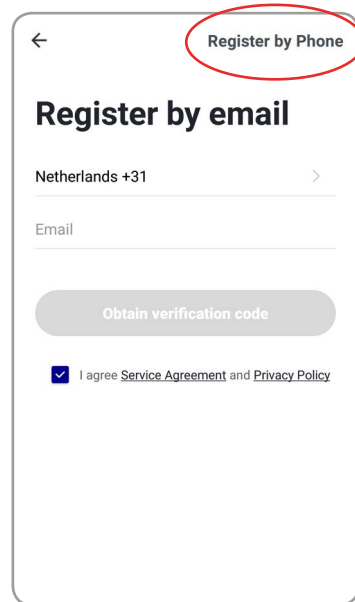 

img 2

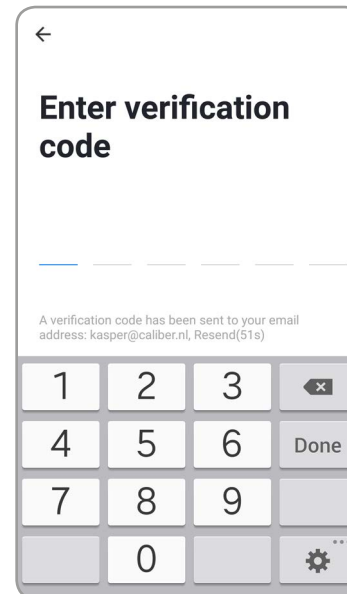 

img 3

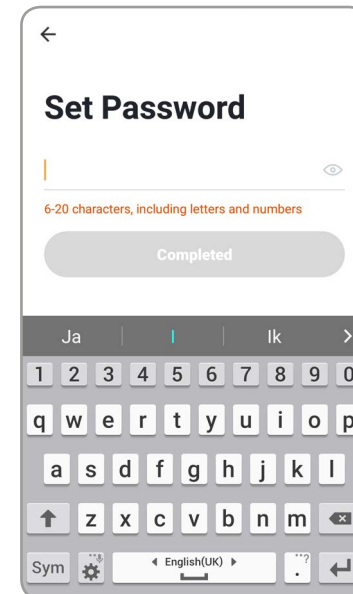 

img 4



The screenshot shows a mobile application login screen. At the top left is a back arrow. The title "Log in" is centered. Below it is a dropdown menu for country/area code, currently set to "Netherlands +31". There are three input fields: "Mobile number/e-mail address", "Password", and a checkbox for "I agree Service Agreement and Privacy Policy". A large grey "Log in" button is centered below the checkbox. At the bottom, there are two links: "Authentication code login" and "Forgot Password".

Account+password sign-in

1. The system will automatically determine your country / area or you could select manually
2. Enter your registered cellphone number or email and password, sign in to the system

Index:

[No. 1 Caliber Smart Home app](#)

[No. 2 Register / Login](#)

[No. 3 Add device\(s\)](#)
• [EZ-mode](#)
• [AP-mode](#)

[No. 4 Control device](#)

[No. 5 Profile](#)

[No. 6 Scene's & Automation](#)

[No. 7 Voice control](#)

 
[No. 8 Trouble shooting](#)

[No. 9 Specifications](#)


Forgot password

If you forgot your account of “Caliber Smart Home”, you can reset the account password by “Forgot password”


1. Tap “Forgot password”, as shown in “img 1”
2. The system automatically determines your country / area. You can also select your country code by yourself. Enter the cellphone number/E-mail and tap “Obtain verification code”, as shown in “img 3”
3. Enter the verification code you received “img 3”. If you didn’t received the verification code within 30min. please try the previous step again.
4. Choose a password for your account “img 4”, tap “Completed” to finish your registration.

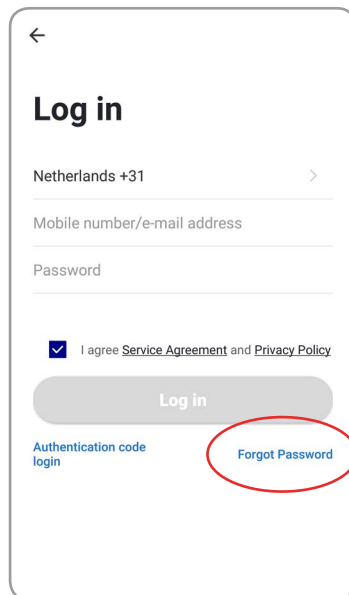


img 1

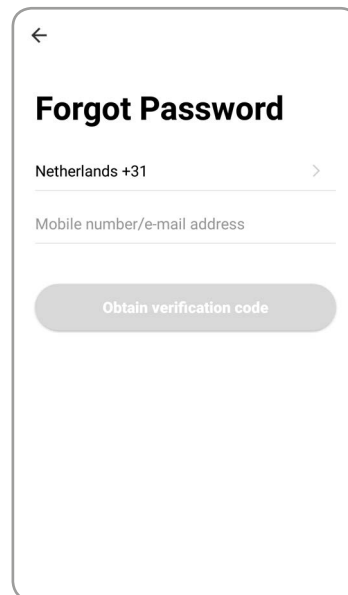 

img 2

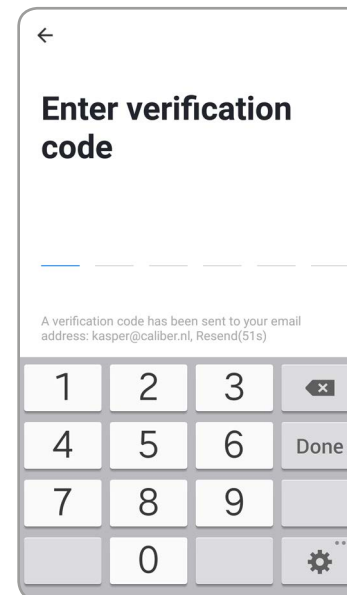 

img 3

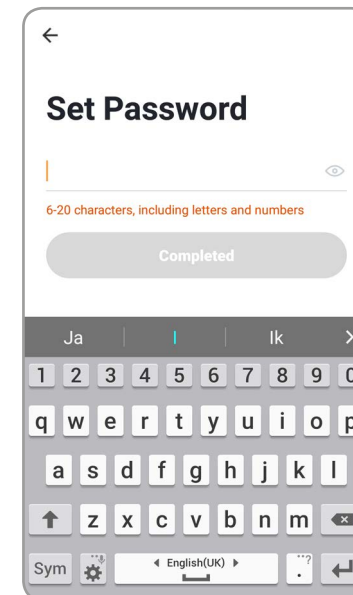 

img 4

Index:

[No. 1 Caliber Smart Home app](#)

[No. 2 Register / Login](#)

[No. 3 Add device\(s\)](#)
 • [EZ-mode](#)
 • [AP-mode](#)

[No. 4 Control device](#)

 
[No. 5 Profile](#)

[No. 6 Scene's & Automation](#)

[No. 7 Voice control](#)

[No. 8 Trouble shooting](#)


[No. 9 Specifications](#)

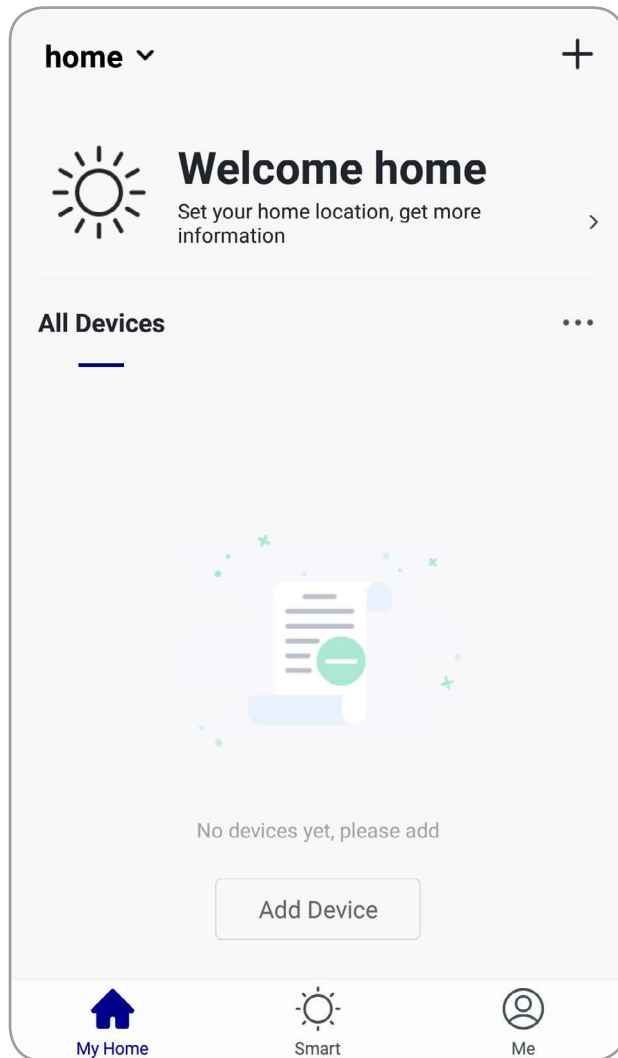

1. Go to the app, tap “+” in the upper right of this page to add device’s as shown in the picture to the left.
2. In this case, select “Siren”
3. For EZ (Easy install) mode, please make sure the device’s indicator light flashes quickly, tap “Confirm indicator rapidly blink” to continue.

Remarks:

 App provides two methods of network connection: **EZ mode** and **AP mode**. Please use **EZ mode** as default. If it failed, please tap “**AP mode**” in the upper right to try connecting again.

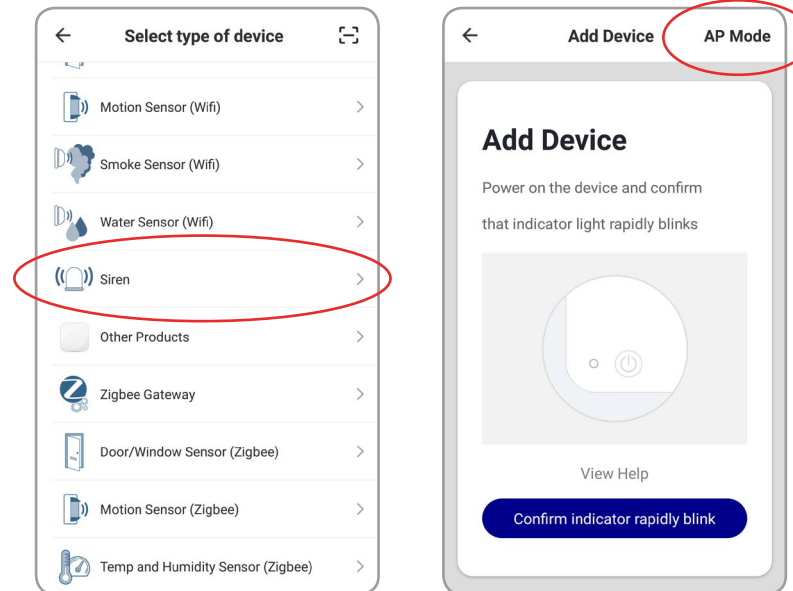

Index:

[No. 1 Caliber Smart Home app](#)

[No. 2 Register / Login](#)

[No. 3 Add device\('s\)
• EZ-mode
• AP-mode](#)

[No. 4 Control device](#)

[No. 5 Profile](#)

[No. 6 Scene's &
Automation](#)

[No. 7 Voice control](#)

 
[No. 8 Trouble shooting](#)

[No. 9 Specifications](#)

ADD device in EZ mode (default)

Press and hold the reset button on the inside for 5 sec.
The LED will blink fast in EZ mode (3 times/per second).

Remarks: If indicator light is slowly flashing (Once per 2s), it indicates that device is under AP mode. Long press reset button for 5 seconds to switch the modes.

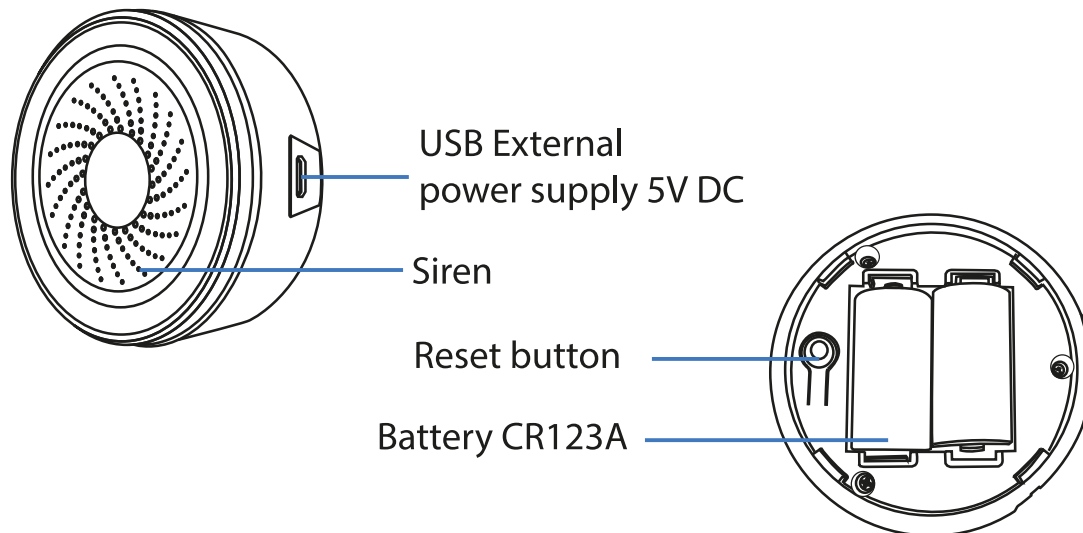**Index:**

[No. 1 Caliber Smart Home app](#)

[No. 2 Register / Login](#)

[No. 3 Add device\('s\)](#)

- EZ-mode
- AP-mode

[No. 4 Control device](#)

 
[No. 5 Profile](#)

[No. 6 Scene's & Automation](#)

[No. 7 Voice control](#)

[No. 8 Trouble shooting](#)

[No. 9 Specifications](#)

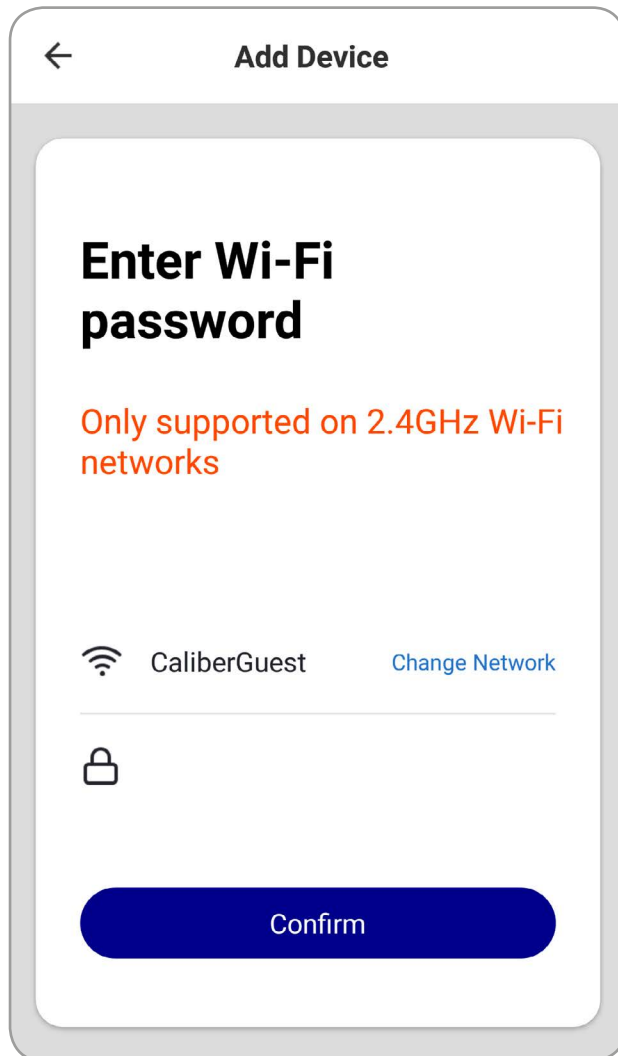

ADD device in EZ mode (default)

Next step: confirm the WiFi for device connection and enter the password. Tap "Confirm" and start connecting the device. (remarks: only supports 2.4G Wi-Fi network), as shown in the picture.

The connection process takes up to 30 sec.
If **EZ mode** fails, try **AP mode**.

Remarks:

The purpose of this step is to let the "Caliber Smart Home" app know which router to use for Wi-Fi network connection. After a successful setup, the device will automatically connect to the Wi-Fi network.

Index:

[No. 1 Caliber Smart Home app](#)

[No. 2 Register / Login](#)

[No. 3 Add device\('s\)](#)
• EZ-mode
• AP-mode

[No. 4 Control device](#)

[No. 5 Profile](#)

[No. 6 Scene's & Automation](#)



[No. 7 Voice control](#)

 
[No. 8 Trouble shooting](#)

[No. 9 Specifications](#)


Connecting

Now the connection status shows. "Device added!" notification will show after device is successfully connected. Tap "Completed" and the interface jump to the device's user interface. Then you could start making changes or monitor the device.


Tap the edit symbol :  or  to make changes in the name etc.

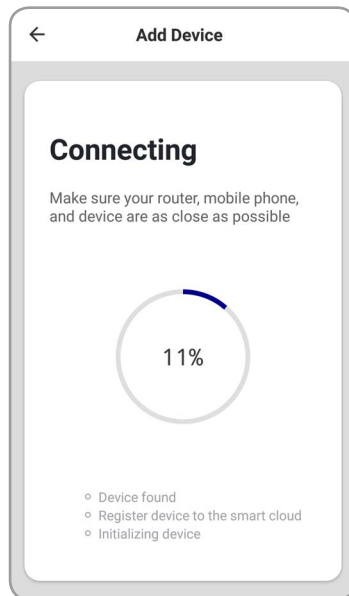

img 1

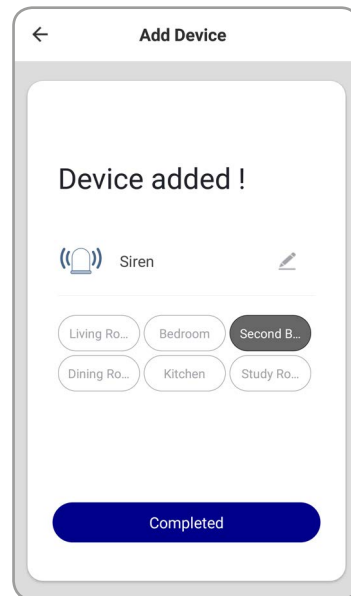 

img 2

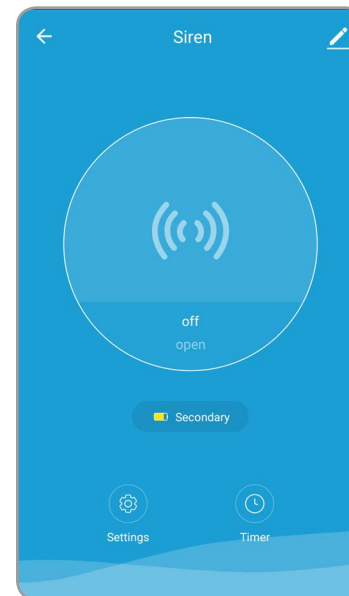 

img 3

Index:

[No. 1 Caliber Smart Home app](#)

[No. 2 Register / Login](#)

[No. 3 Add device\('s\)
• EZ-mode
• AP-mode](#)

[No. 4 Control device](#)

[No. 5 Profile](#)

[No. 6 Scene's &
Automation](#)

[No. 7 Voice control](#)

[No. 8 Trouble shooting](#)

[No. 9 Specifications](#)

ADD device in AP mode (alternative mode, Hotspot)

When the internet connection is unstable, the app will show a message as in “img 1”

The connection has failed, now it's time to try again in **AP-mode**

1. Tap “+” (ADD Device)
2. Choose **AP-Mode** on the top right of the screen.
3. Press and hold the reset button (3) on the rear for 5 sec.
Press and hold the button again for 5sec. The LED indicator will blink slowly in blue.
4. Enter the password of your Wi-Fi network and confirm.

Note: If you're installing a different product, please tap “view help” to see product specific instructions per connection mode on screen.

Index:

[No. 1 Caliber Smart Home app](#)

[No. 2 Register / Login](#)

[No. 3 Add device\('s\)](#)
• EZ-mode
• AP-mode

[No. 4 Control device](#)

 
[No. 5 Profile](#)

[No. 6 Scene's & Automation](#)


[No. 7 Voice control](#)

[No. 8 Trouble shooting](#)


[No. 9 Specifications](#)

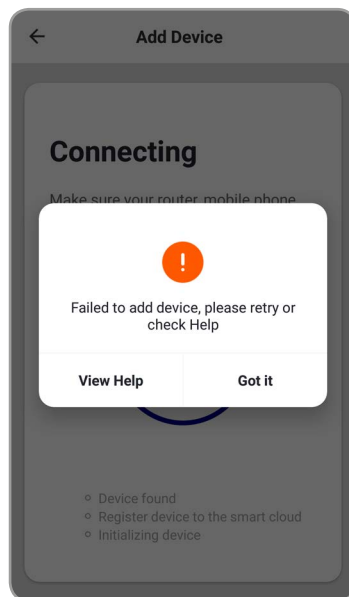


img 1

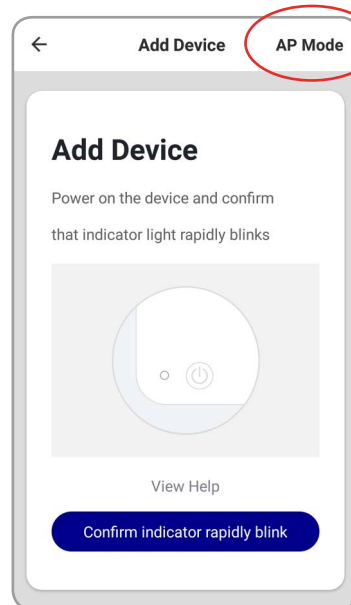 

img 2

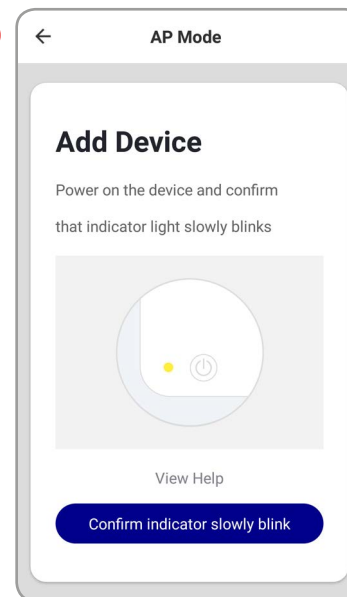 

img 3

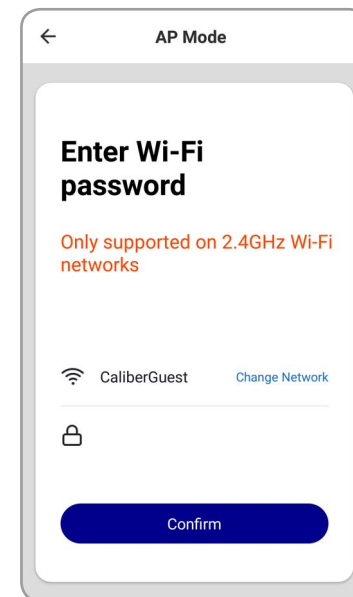 

img 4



ADD device in AP mode (manual mode, Hotspot)

 
6. Connect to device's hotspot in Wi-Fi list 'SmartLife_XXXX' to finish the Wi-Fi connection. App will jump to "connection successful" page when the Wi-Fi connection process is complete.

Note: In some cases, depending on your phone or table, you might have to return to the "Caliber Smart Home" app manually for the connection to continue.


Connecting

Now the connection status shows. "Device added!" notification will show after device is successfully connected. Tap "Completed" and the interface jump to the device's user interface. Then you could start making changes or monitor the device.


Tap the edit symbol :  or  to make changes in the name etc.

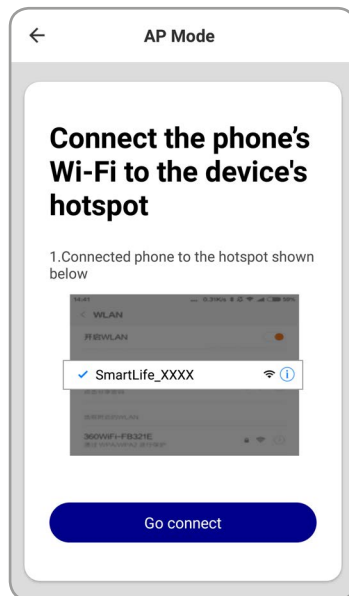


img 1

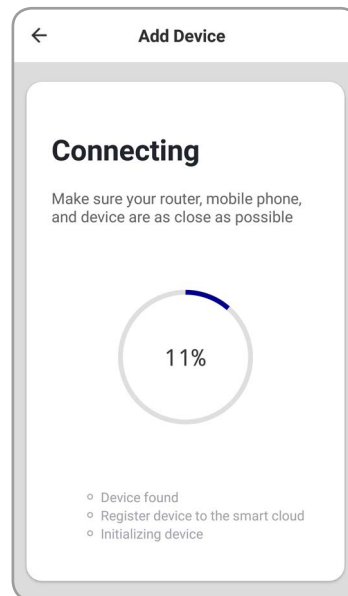 

img 2

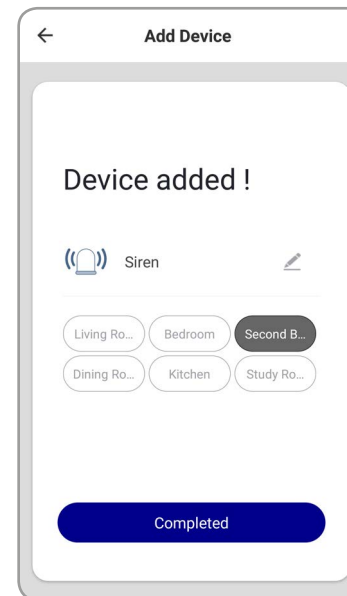 

img 3

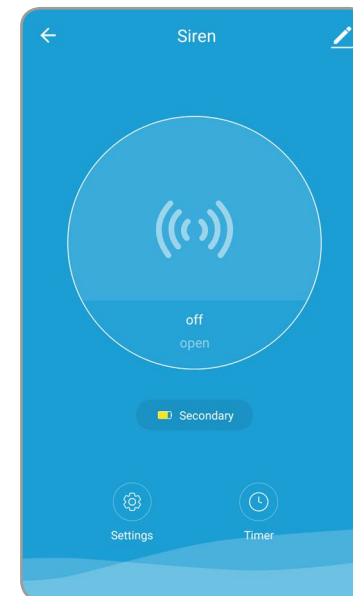 

img 4

Index:

[No. 1 Caliber Smart Home app](#)

[No. 2 Register / Login](#)

[No. 3 Add device\('s\)](#)
 • [EZ-mode](#)
 • [AP-mode](#)

[No. 4 Control device](#)

 
[No. 5 Profile](#)

[No. 6 Scene's & Automation](#)

[No. 7 Voice control](#)

[No. 8 Trouble shooting](#)

[No. 9 Specifications](#)

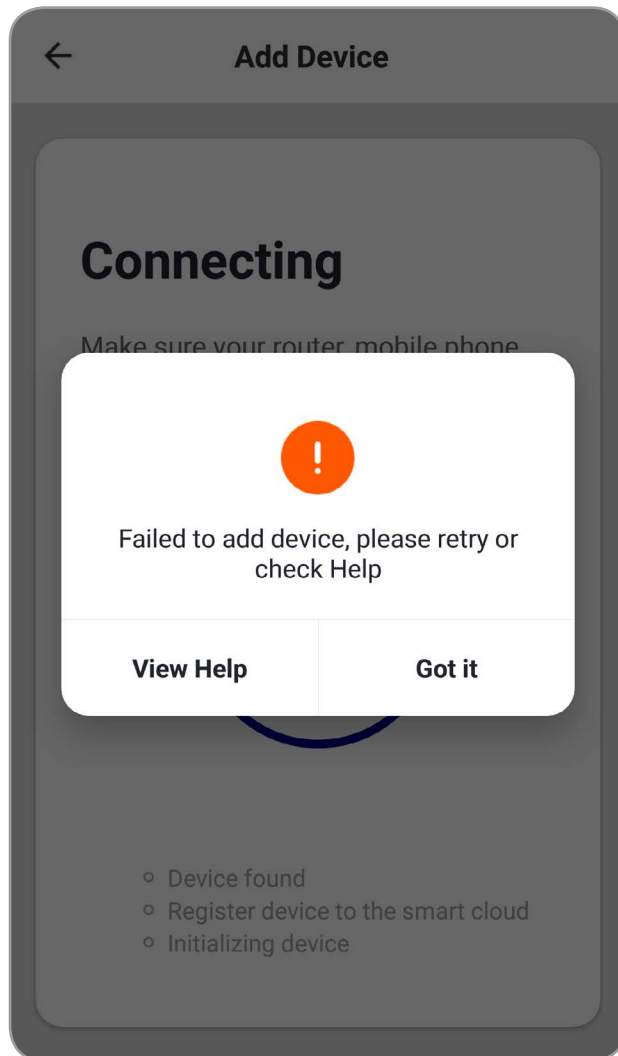**Remarks:**

If your app interface is shown as in the picture, it means that the network connection failed. You could try connecting again.

If connection is fails, please refer to the [Trouble shooting](#) page or "View Help". If you can't find your answers, please submit the user feedback in the app. Our staff will help you to solve the problems.

Index:

[No. 1 Caliber Smart Home app](#)

[No. 2 Register / Login](#)

[No. 3 Add device\('s\)](#)
• [EZ-mode](#)
• [AP-mode](#)

[No. 4 Control device](#)

 
[No. 5 Profile](#)

[No. 6 Scene's & Automation](#)

[No. 7 Voice control](#)

[No. 8 Trouble shooting](#)

[No. 9 Specifications](#)

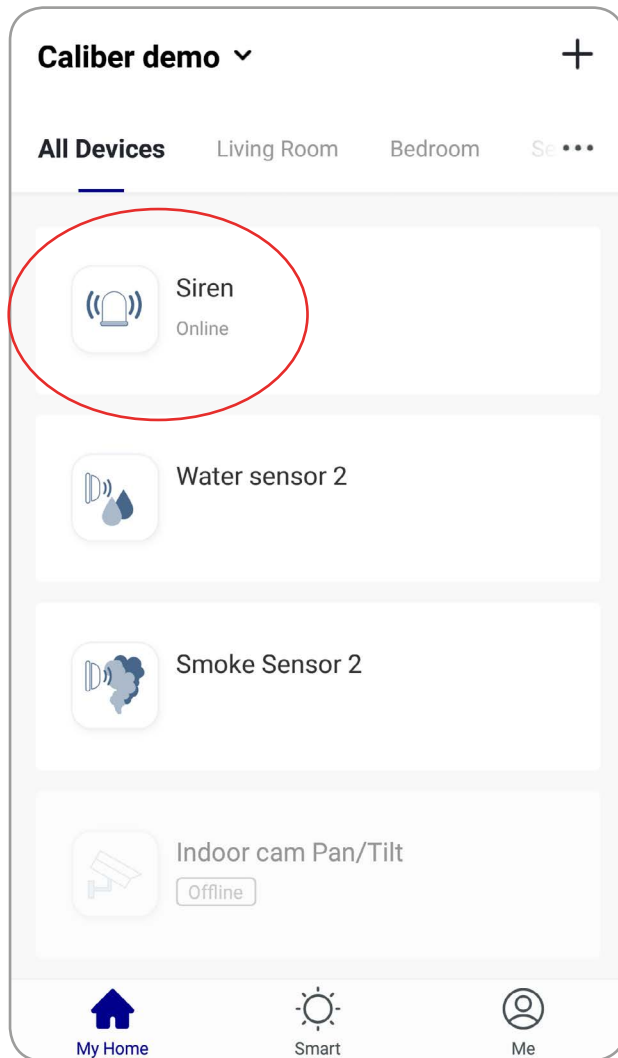

Control device

After the device is connected successfully, tap “My Home” at the bottom. The device name shows in the list. Tap it to enter the control panel of the device (Water sensor)

Remarks:

When device is online, operation via shortcuts is supported; When the device is offline, device displays “device is offline” and is greyed out.

Index:

[No. 1 Caliber Smart Home app](#)

[No. 2 Register / Login](#)

[No. 3 Add device\(s\)](#)
• [EZ-mode](#)
• [AP-mode](#)

[No. 4 Control device](#)

 
[No. 5 Profile](#)

[No. 6 Scene's & Automation](#)

[No. 7 Voice control](#)



[No. 8 Trouble shooting](#)

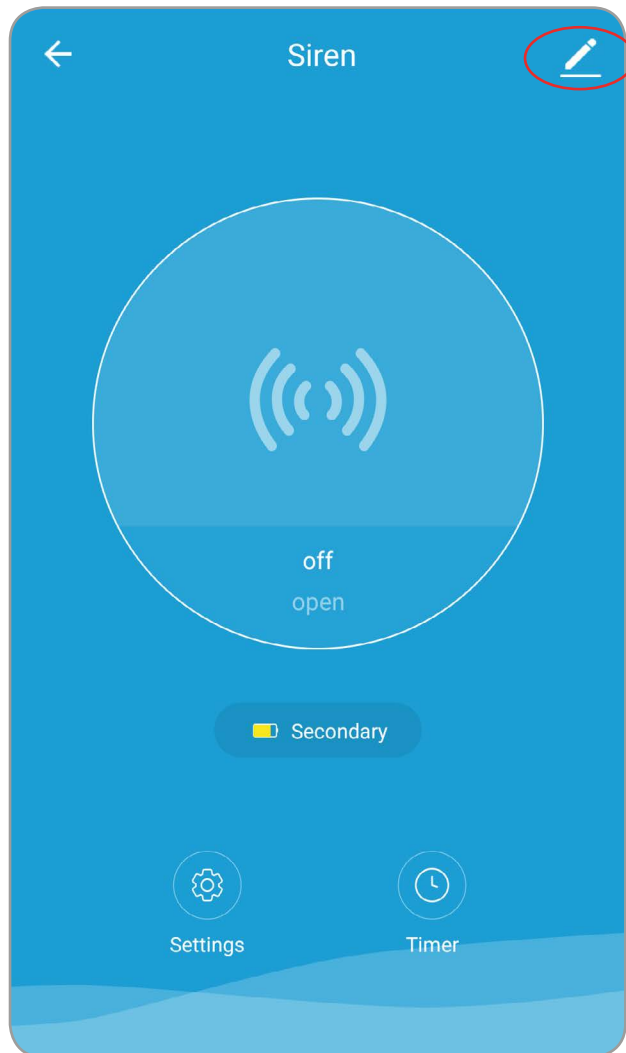
[No. 9 Specifications](#)



Control device

From this page, all device settings can be altered.

 Tap the edit symbol :  or  to make changes in name, location, share settings etc.

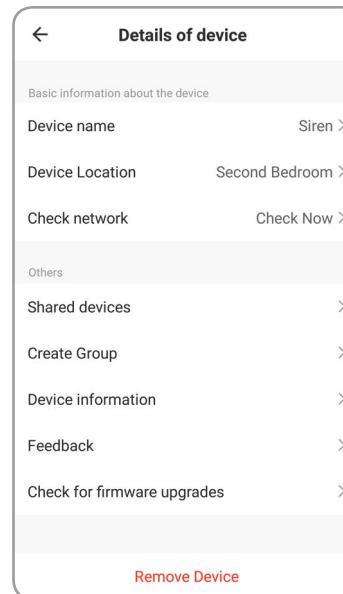

Index:

[No. 1 Caliber Smart Home app](#)

[No. 2 Register / Login](#)

[No. 3 Add device\(s\)](#)
• [EZ-mode](#)
• [AP-mode](#)

[No. 4 Control device](#)

 
[No. 5 Profile](#)

[No. 6 Scene's & Automation](#)

[No. 7 Voice control](#)

[No. 8 Trouble shooting](#)

[No. 9 Specifications](#)

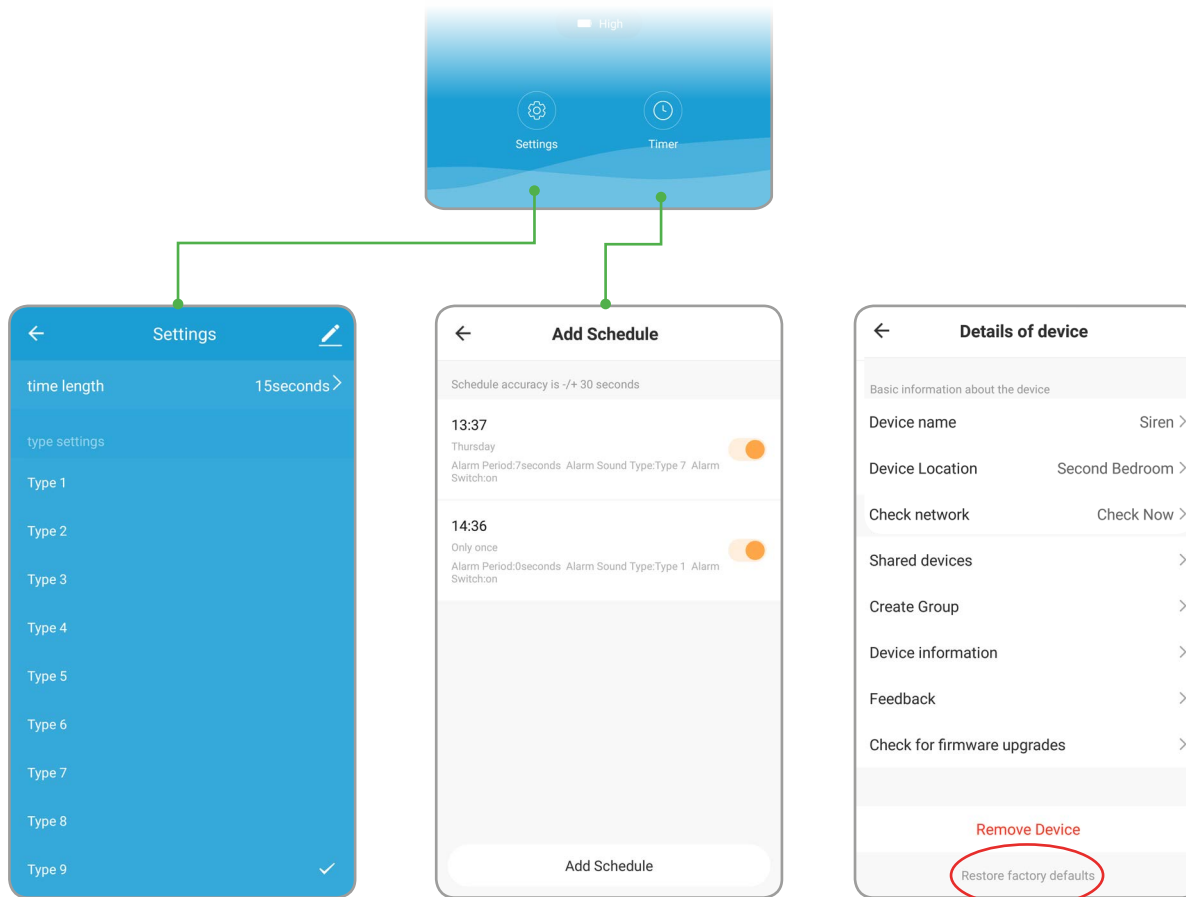

Settings

Select alarm time length and type

Timer

Add Schedule, when to sound the alarm

Restore factory defaults

This deletes all motion records and will remove the device.

Index:

[No. 1 Caliber Smart Home app](#)

[No. 2 Register / Login](#)

[No. 3 Add device\(s\)](#)
 • [EZ-mode](#)
 • [AP-mode](#)

[No. 4 Control device](#)

 
[No. 5 Profile](#)

[No. 6 Scene's & Automation](#)

[No. 7 Voice control](#)

[No. 8 Trouble shooting](#)



[No. 9 Specifications](#)

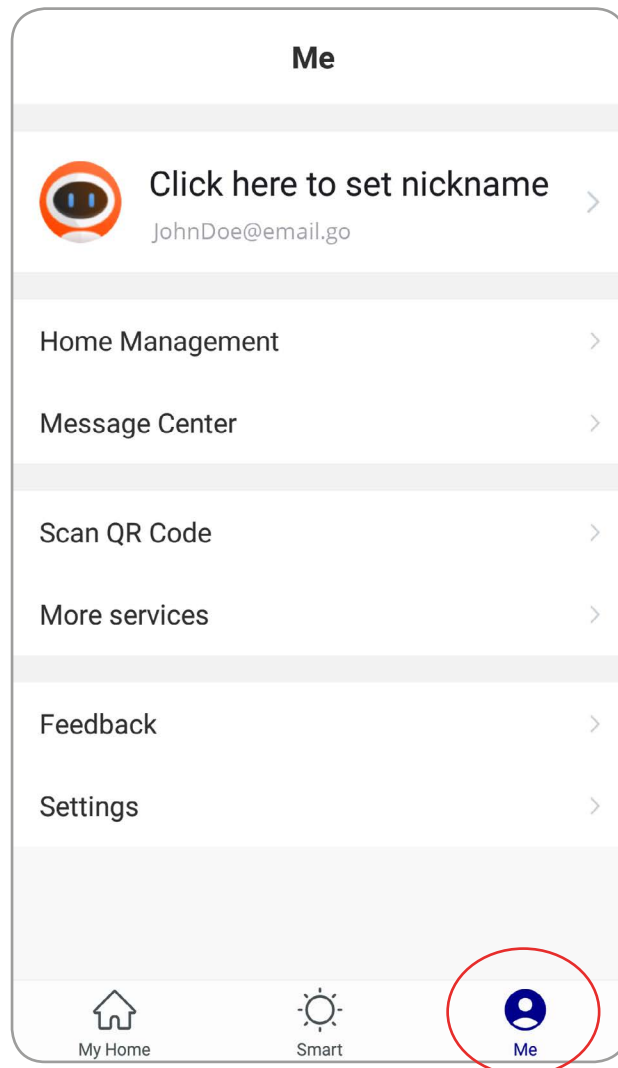

Profile (Me)

In order to make full use of the functionality of this app and your Caliber Smart Home devices, make your home situation match the situation in the app.

  1. Choose family name
2. Manage your rooms
3. Set the location, for area automations
4. Add members to the family

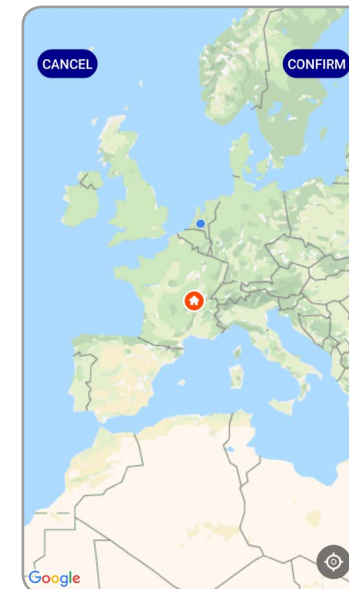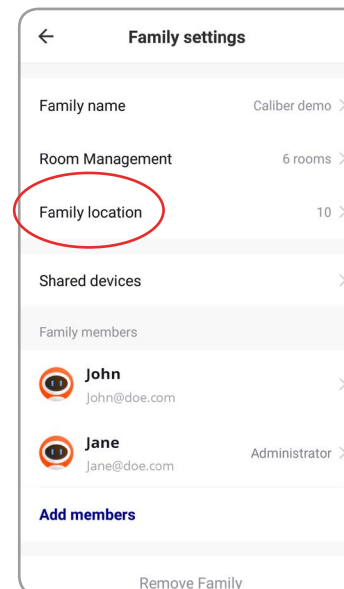

Index:

[No. 1 Caliber Smart Home app](#)

[No. 2 Register / Login](#)

[No. 3 Add device\(s\)](#)
 • [EZ-mode](#)
 • [AP-mode](#)

[No. 4 Control device](#)

[No. 5 Profile](#)

[No. 6 Scene's & Automation](#)

[No. 7 Voice control](#)

[No. 8 Trouble shooting](#)

[No. 9 Specifications](#)

Scene's

You can combine devices to do 'tasks' in a "scene". Go to Smart (img1)

The next pages describes general information. Some products cannot preform scene's

1. Tap "+" in the upper right of the page to create a new smart scene.
2. Tap "scene" img 2
3. Enter life scene name, add task, tap "Save", as shown in the picture. A smart scene has been created.
3. You can also change the scene you have already created (img1) , change scene name, change task or delete smart scene etc.

Index:

[No. 1 Caliber Smart Home app](#)

[No. 2 Register / Login](#)

[No. 3 Add device\('s\)](#)
 • [EZ-mode](#)
 • [AP-mode](#)

[No. 4 Control device](#)

 
[No. 5 Profile](#)

[No. 6 Scene's & Automation](#)


[No. 7 Voice control](#)

[No. 8 Trouble shooting](#)


[No. 9 Specifications](#)

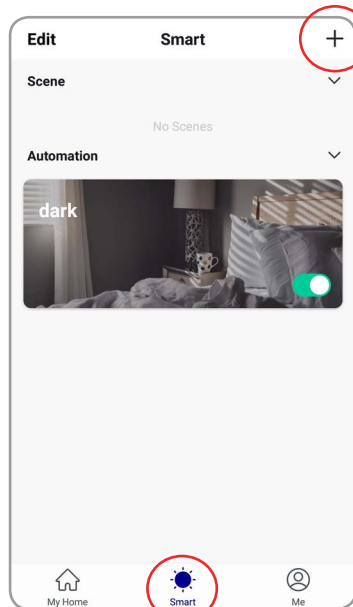


img 1

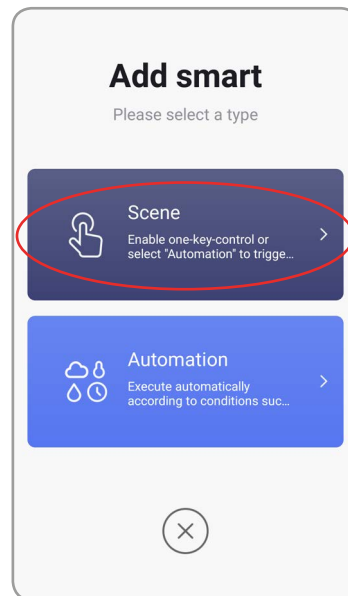 

img 2

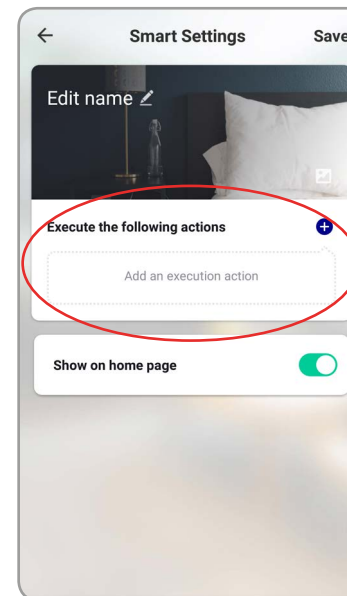 

img 3

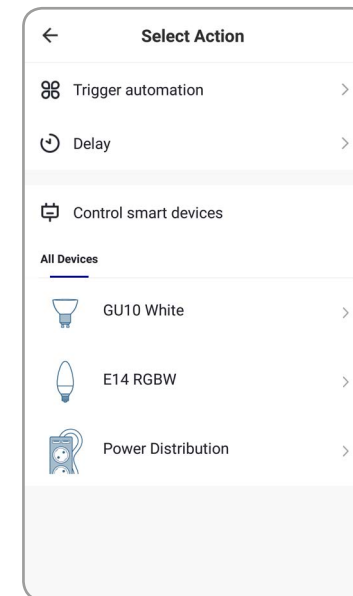 

img 4

Automation

You can execute automations, when conditions are met.

1. Tap "+" in the upper right of the page to create a new smart scene
2. Tap "Automation"
3. Choose which conditions should be met "img3".
4. Choose what 'task /action' should be executed "img3".
5. img4 shows an example (This might include a different product). The Smart light group "E27 RGBW" switches ON when the sun sets. For this function you need to set your location, see [control device](#).

Index:

[No. 1 Caliber Smart Home app](#)

[No. 2 Register / Login](#)

[No. 3 Add device\(s\)](#)
 • [EZ-mode](#)
 • [AP-mode](#)

[No. 4 Control device](#)

 
[No. 5 Profile](#)

[No. 6 Scene's & Automation](#)


[No. 7 Voice control](#)

[No. 8 Trouble shooting](#)


[No. 9 Specifications](#)

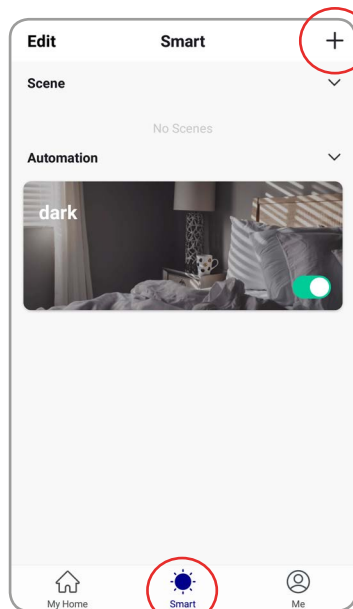


img 1

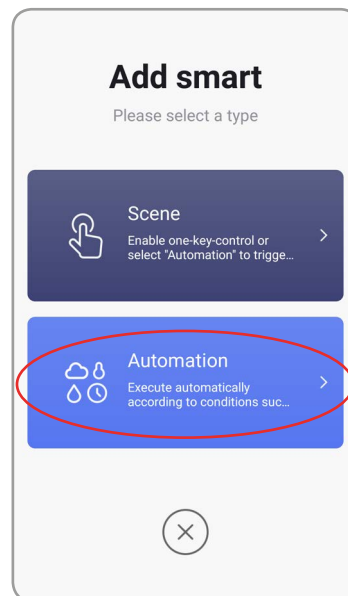 

img 2

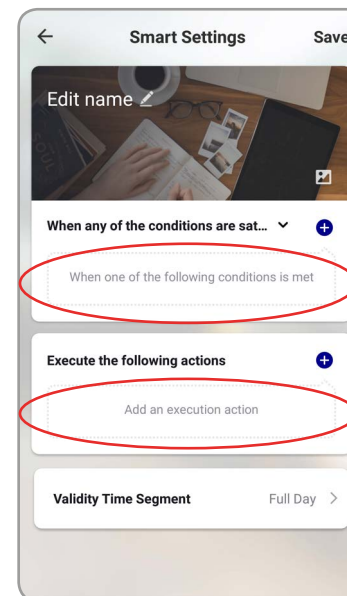 

img 3

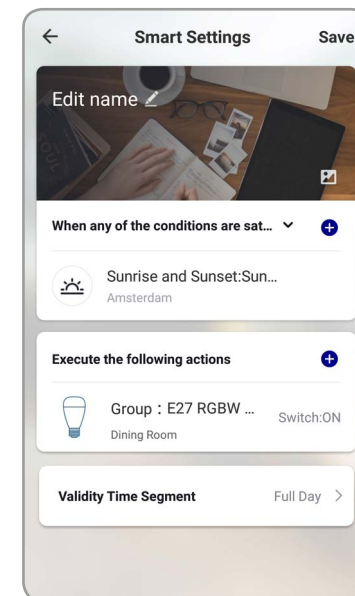 

img 4



Voice control

Most of our Smart Home products support 3rd party voice control. Instructions how to connect can be found in the links below:

Connect with Google Home

[Webshop.caliber.nl/media/SmartHome/Caliber in GoogleHome.pdf](http://Webshop.caliber.nl/media/SmartHome/Caliber_in_GoogleHome.pdf)

Connect with Amazon Alexa

[Webshop.caliber.nl/media/SmartHome/Caliber with Amazon-Alexa.pdf](http://Webshop.caliber.nl/media/SmartHome/Caliber_with_Amazon-Alexa.pdf)

Index:

[No. 1 Caliber Smart Home app](#)

[No. 2 Register / Login](#)

[No. 3 Add device\('s\)](#)
• [EZ-mode](#)
• [AP-mode](#)

[No. 4 Control device](#)

[No. 5 Profile](#)

[No. 6 Scene's & Automation](#)

[No. 7 Voice control](#)

[No. 8 Trouble shooting](#)

[No. 9 Specifications](#)



Possible reasons why a device cannot be added:

1. The device is not powered on
2. WiFi signal is strong and stable, distance between device and router should be not too far
3. The smartphone cannot connect to WiFi
4. Wifi password not correct
5. The device is in configuration state (When a device needs to be added, you need to bring it into WiFi configuration state)
6. You selected a 5GHz network (with dual band routers) Devices only support 2.4GHz network

Router issues:

1. Encryption mode should be WPA2-PSK type, Authentication type AEX or set to "automatic".
2. Wireless mode cannot be 11n only
3. Max number of connected devices has reached upper limit of router. Disconnect other devices from WiFi

Index:

[No. 1 Caliber Smart Home app](#)

[No. 2 Register / Login](#)

[No. 3 Add device\(s\)](#)
• [EZ-mode](#)
• [AP-mode](#)

[No. 4 Control device](#)

[No. 5 Profile](#)

[No. 6 Scene's & Automation](#)

[No. 7 Voice control](#)

[No. 8 Trouble shooting](#)

[No. 9 Specifications](#)



1. PRODUCT DESCRIPTION

HWS701 is a Wi-Fi based Siren. Sounds an alarm when triggered. The siren can be triggered by a Caliber motion detector, door / window sensor, smoke / heat sensor etc.

2. FEATURES

- Works with Google assistant by voice control
- Works with Amazon Alexa by voice control
- Works with IFTTT
- 120dB acoustic siren with multiple sound selections and with visual light effects
- Push notification on app
- Alarm history records
- No HUB/gateway required
- Activation by scenario trigger.
- Work on 5V input (USB-to-micro USB wire (1.2m) included)
- Optional backup on batteries (2x CR123A • not included)
- Size: Ø68mm x 30(H) mm

Power supply:	Mini USB , 5V-1A
Backup power supply:	CR123A x 2 (optional, not included)
Sound intensity:	120 dB Wireless
Type:	2.4GHz, 1T1R
Protocol:	IEEE 802.11b/g/n
Wireless Range:	45m
Operating Temperature:	0°C 60°C (32°F~104°F)
Support systems:	Android and IOS.
Size:	68(W) x 68(D) x 30(H) mm

Set consists of: Siren HWS701
Manual
Bag mounting material
Mounting sticker
micro-USB cable

We are continuously improving/updating our products and product information. It's therefore possible that there is a slight difference between the description in this manual to the operation of the product.

If something is different or not clear; always check our website for the most current manual version. The (app) images and illustrations used are indicative and may vary per device and version

Index:

[No. 1 Caliber Smart Home app](#)

[No. 2 Register / Login](#)

[No. 3 Add device\('s\)](#)
• EZ-mode
• AP-mode

[No. 4 Control device](#)

[No. 5 Profile](#)

[No. 6 Scene's & Automation](#)

[No. 7 Voice control](#)

[No. 8 Trouble shooting](#)

[No. 9 Specifications](#)

All rights reserved

The pictures used in this manual are Android app interface, iOS version is a bit different

Product and software update periodically, the number and app interface in this manual are only shown as an example. No extra notification on further changes.

Wifi Freq range: 2402-2480 Mhz, Max e.r.p: <100mW/20dBm

The Apple logo is a trademark of Apple Inc., registered in the U.S. and other countries.

Tuya word mark and logos are registered trademarks owned by Tuya, Inc. and any use of such marks by Caliber Europe BV is under license. Other trademarks and trade names are those of their respective owners.

Google Play and the Google Play logo are trademarks of Google LLC.

Amazon Alexa logo are trademarks of Amazon Alexa.

IFTTT logo are trademarks of IFTTT.

Index:

[No. 1 Caliber Smart Home app](#)

[No. 2 Register / Login](#)

[No. 3 Add device\('s\)](#)

- [EZ-mode](#)
- [AP-mode](#)

[No. 4 Control device](#)

[No. 5 Profile](#)

[No. 6 Scene's & Automation](#)

[No. 7 Voice control](#)

[No. 8 Trouble shooting](#)

[No. 9 Specifications](#)

Thank you!

Index:

[No. 1 Caliber Smart Home app](#)

[No. 2 Register / Login](#)

[No. 3 Add device\(s\)](#)

- EZ-mode
- AP-mode

[No. 4 Control device](#)

[No. 5 Profile](#)

[No. 6 Scene's & Automation](#)

[No. 7 Voice control](#)

[No. 8 Trouble shooting](#)

[No. 9 Specifications](#)

Explore our growing number of smart home products

