 
 


## How to insert the batteries

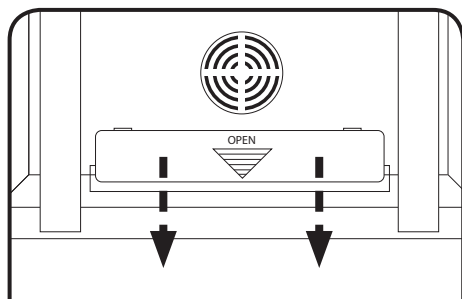


- 1. Backside view:**  
Open the battery compartment by sliding the cover downwards

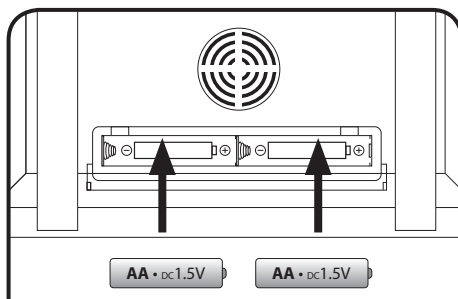

- 2. Backside view:**  
Place the two included batteries (AA • DC1.5V) in the compartment. **Note the + and - sides.**

## How to synchronize the time

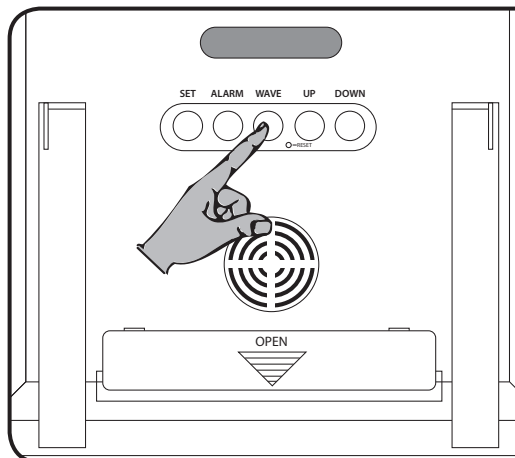

### Backside view:

To activate automatic synchronisation, press the **wave** button. An antenna will be shown on the display.

Please wait for auto. sync. This can take up to 2 to 3 minutes when the signal is strong. Up to 8 minutes if the signal is weak.

When activated, the signal will automatically be checked daily.

Full manual can be downloaded from our website.

**WWW.CALIBER.NL**