CALIBER HPG320

AM/FM 2-Band 72h Emergengy radio

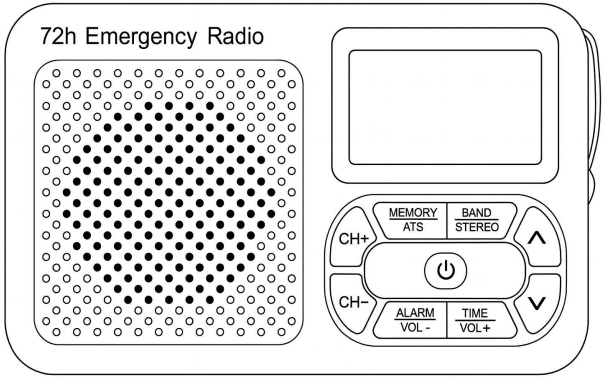

User Manual

SCHEMATIC DIAGRAM

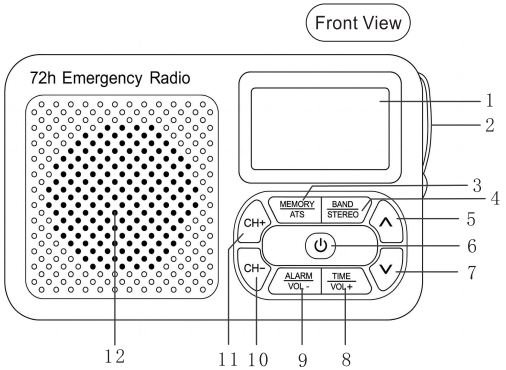

1. Screen
2. 3.5mm Earphone Jack
3. Memories (Manual Storage)/ATS (Auto Tuning Storage) Button
4. Band Select/FM Stereo Button
5. Tuning Adjust + Button
6. Power/Sleep Timer Setting/Mute Button
7. Tuning Adjust – Button
8. Volume +/ Clock Setting Button
9. Volume -/ Alarm Setting Button
10. Stored Memories Channel – Button
11. Stored Memories Channel + Button
12. Speaker

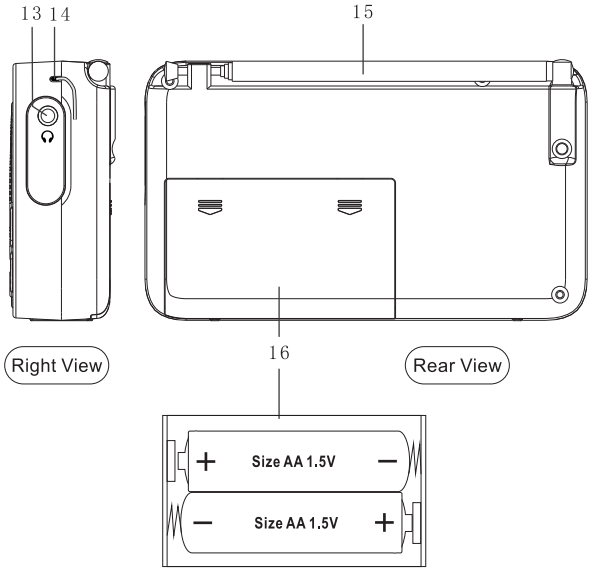

13. 3.5mm Earphone Jack
14. Wrist Strap
15. Telescopic Antenna
16. Battery Cover

Screen Display

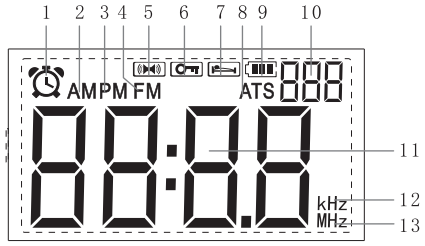

1. Alarm Icon
2. AM Band/a.m. Display
3. p.m. Display
4. FM Band Display
5. FM Stereo Icon
6. Button Lock Icon
7. Sleep Timer Icon
8. ATS Display
9. Battery Capacity Icon
10. Volume/ Stored Memories Channel No. Display
11. Frequency/Time Display
12. kHz Display
13. MHz Display

INSTALLING BATTERIES

1. To open the Battery Cover ⑯, press down and slide it out. Put in two AA batteries, making sure the positive and negative ends match the markings on the device.
2. Close the cover by pushing it in.

3. Battery Capacity Icon Description:
   - 3 cells of battery power: C > 75%
   - 2 cells of battery power: 50% < C < 75%
   - 1 cell of battery power: 25% < C < 50%
   - 0 cells of battery power: 3% < C < 25%
     C < 3% blink
   - C stands for battery capacity



OPERATION

Turning On/Off

- Press the Power Button ⑥ to switch the radio on.
- Press the Mute Button ⑥ to mute the radio and the frequency flashes on the screen.
- Long press the Power Button ⑥ to switch the radio off.

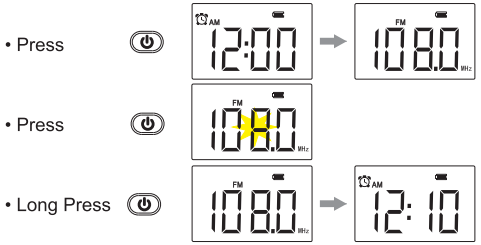

Band Selection

Press the Band Select Button ④ to switch between FM and AM radio bands.

Sleep Timer

- Turn off the radio, then long press the Sleep Timer Setting Button ⑥, you will see the indicator flash and the current sleep time (e.g. “90”).
- Keep pressing the Sleep Timer Setting Button ⑥ to change the sleep time (90, 80, 70, … down to 10 minutes).
- Wait a few seconds to save settings.
- The radio will switch off when the set time is up. The radio can also be switched off by long pressing the Power Button ⑥.

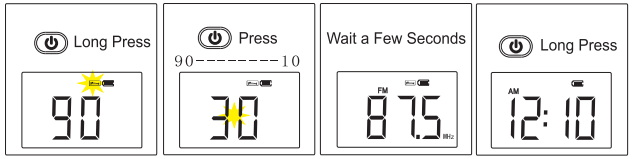

Volume Adjustment

Press the Volume - Button ⑨ or Volume + Button ⑧ to change the sound.

Use of Earphones

Please use standard 3.5mm headphones to connect this device.

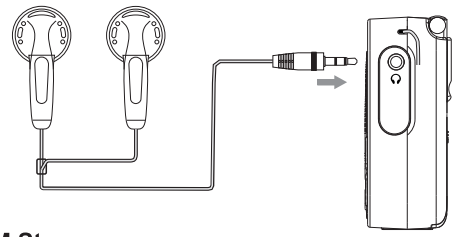

FM Stereo

- When you get an FM stereo signal, The unit automatically enters stereo mode and the display shows the FM stereo icon.
- Press the FM Stereo Button ④ to exit stereo mode.

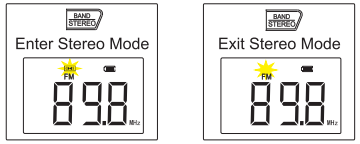

Manual Tuning

- Press Tuning Adjust + Button ⑤ or Tuning Adjust – Button ⑦ to change the frequency.
- Long press Tuning Adjust + Button ⑤ or Tuning Adjust – Button ⑦ to find the next/previous station.

Auto Tuning Storage

- Long press the ATS (Auto Tuning Storage) Button ③ to scan and save radio stations. Stores up to 100 preset (FM: 60, AM: 40).
- Press the Stored Memories Channel – Button ⑩ or Stored Memories Channel + Button ⑪ to browse through preset radio stations.

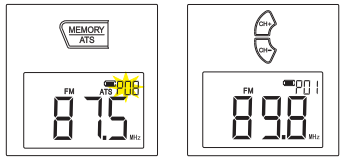

Restore Factory Setting

Turn off the radio, press the three buttons below in sequence, and the “rSt” character appears on the screen and flashes, then press the Power Button ⑥ to restore the factory settings.



Clock Setting

- Turn off the radio, long press the Clock Setting Button ⑧ the hour display will flash. Press the Tuning Adjust Button ⑤ or Tuning Adjust Button ⑦ to adjust the hour.
- Press the Clock Setting Button ⑧ the minute display will flash. Press the Tuning Adjust Button ⑤ or Tuning Adjust Button ⑦ to adjust the minutes.
- Press the Clock Setting Button ⑧ the 12/24 hour display will flash. Use the Tuning Adjust Button ⑤ or Tuning Adjust Button ⑦ to pick a 12 or 24-hour format.
- Press the Clock Setting Button ⑧ to save the clock setting.

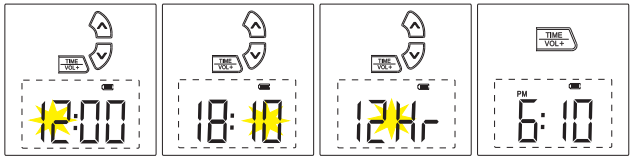

Manual Storage

- Tune to the station you want. Press the Memories (Manual Storage) Button ③ you will see the stored memories number flashing (e.g. “P01”).
- Use the Stored Memories Channel – Button ⑩ or Stored Memories Channel + Button ⑪ to pick a preset number.
- Press Memories (Manual Storage) Button ③ to save your chosen preset.

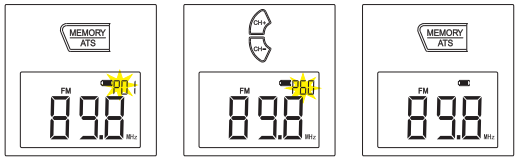

Alarm Power On Function

Turn off the radio, and press the Alarm Setting Button ⑨ you will see the alarm ( ) icon.

- Long press the Alarm Setting Button ⑨ the hour display will flash. Press the Tuning Adjust Button ⑤ or Tuning Adjust Button ⑦ to adjust the hour.
- Press the Alarm Setting Button ⑨ the minute display will flash. Press the Tuning Adjust Button ⑤ or Tuning Adjust Button ⑦ to adjust the minutes.
- Press the Alarm Setting Button ⑨ again, and choose “buz” or “PON” for the buzzer or radio alarm.
- Press the Alarm Setting Button ⑨ to save the clock setting.

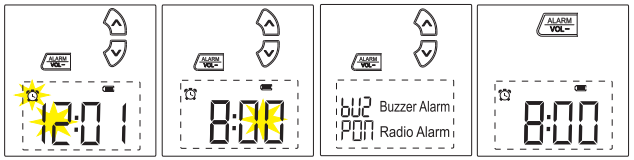

- If you choose the radio alarm, when the alarm sounds, it’ll play the last station.
- If you opt for the buzzer alarm when it goes off, the radio won’t switch on.
- To stop the alarm, press the Power Button ⑥.

• When the alarm sounds, pressing any button except the Power ⏻ Button ⑥ will enter snooze mode, and after 9 minutes, the alarm will sound again. Snooze mode can be turned on repeatedly as described above.

Use of Antenna

• When listening to the FM stations, extend the Telescopic Antenna ⑮ to its longest length for optimal reception.
• When listening to AM stations, the radio uses its internal iron oxide bar antenna to receive the signal. To improve its AM reception, try changing its location or adjusting its orientation.

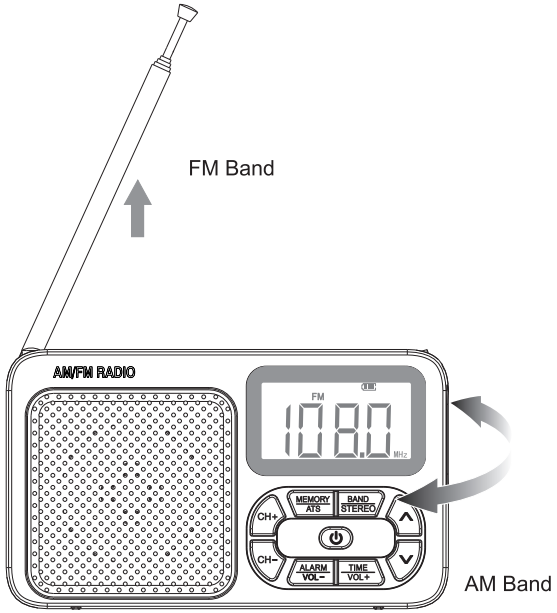

WHAT'S IN THE BOX

• Radio Receiver with wrist strap
• User manual

Required:

• 2x AA batteries (not included)